

KANE9206

Quintox Flue Gas Analyser



Stock No: 19332-2

February 2014

© Kane International Ltd

CONTENTS

	Page No:
KANE9206 OVERVIEW	7
STANDARD FEATURES	7
HANDSET	7
MAIN ANALYSER UNIT	7
OPTIONS	9
ELECTROCHEMICAL SENSORS	9
OTHER OPTIONS	9
PROBE OPTIONS	9
SPARE PARTS LIST	9
KANE9206 WITH KANELIVE PC SOFTWARE	10
ANALYSER LAYOUT AND FEATURES	11
HANDSET FEATURES	11
ANALYSER LAYOUT	12
ANALYSER LAYOUT WITH KMDM220 GAS CONDITIONING MODULE FITTED	13
TYPICAL PROBE CONFIGURATION (KMCP6)	14
ANALYSER CONNECTIONS	15
GETTING STARTED	16
BEFORE TAKING READINGS	16
MENU: ALL THE OPTIONS	17
STATUS: ESTABLISHING THE ANALYSER'S SET-UP	18

SETUP: CONFIGURING THE ANALYSER'S SET-UP	20
LANGUAGE	20
MAIN PURGE	21
PRINTER	21
AUTO SET TIME	22
SET TIME	22
SET DATE	23
HEATER STATUS	23
SELECT ANALYSER UNIT SERIAL NUMBER	23
BLUETOOTH SET UP	24
BLUETOOTH PASSKEY	24
ANALYSER UNITS: CONFIGURES ALL THE DATA SOURCES AND SETTINGS	25
FUEL ORIGIN	25
FUEL TYPE	25
EFFICIENCY	25
GAS UNITS	26
TEMPERATURE	26
PRESSURE	26
SET PERCENTAGE REFERENCE 02	26
SET NO _x CALCULATION	26
CONVERSION FACTORS	26
CO ALARM	27
CO ALARM SET	27
CO ALARM LEVEL	27
SCREEN	28
CONTRAST	28
B'LIGHT	28
MODE	28
LINES	29

REPORTS: CONFIGURES REPORTS	30
VIEW REPORTS	30
DELETE ALL REPORTS	31
AUTO LOG TIME	31
START AUTO LOG	31
START AUTO PRINTING	31
HEADER 1	31
HEADER 2	31
FORM FEED	31
SERVICE	32
MANUAL AIR ZERO	32
MANUAL PRESSURE ZERO	32
BEFORE USING THE ANALYSER FOR THE FIRST TIME	33
SAFETY WARNING	33
FIRST TIME USE	33
NORMAL START UP SEQUENCE	33
EVERY TIME YOU USE THE ANALYSER	33
AUTOMATIC CALIBRATION	34
MAIN MEASUREMENT SCREEN	36
IN SMALL FONT MODE	36
IN LARGE FONT MODE	37
SAMPLING THE FLUE GAS	39
LONG TERM MONITORING	39
KMDM220 GAS CONDITIONING MODULE	40
SETTING UP KMDM220	40

MAINTENANCE	42
EMPTYING AND CLEANING THE IN-LINE WATER TRAP	42
CHANGING THE PARTICLE FILTER	42
CHARGING THE BATTERY	43
CHANGING THE PAPER ROLL TO START PAPER FEED	43
CHANGING THE PRINTER RIBBON	43
PROBLEM SOLVING	45
HOW TO GET EXPERT HELP	45
END OF LIFE DISPOSAL	46
BATTERY DISPOSAL	46
ANNUAL RECALIBRATION AND SERVICE	46
RETURNING YOUR ANALYSER TO KANE	47
PACKING YOUR ANALYSER	47
SENDING YOUR ANALYSER	47
WHEN WE RECEIVE YOUR ANALYSER	47
SERVICE RETURNS	49
PRODUCT SPECIFICATION	51
UNIT	51
OPTIONAL IR MODULE	52
HANDSET	52
EXTENSION CABLE	52
MAIN BATTERY AND OPTIONAL HEATER BATTERY	53
BATTERY CHARGER	53
PUMP	53
INTEGRAL PRINTER	53
AMBIENT OPERATING RANGE	53
HEATED LINE: KMHL3000	53
HEATED PROBE: KMHP1200	53
GAS CONDITIONING MODULE: KMDM220	54

PROBE	54
OPTIONAL PORTABLE PRINTERS	54
APPENDICES	55
A. PARAMETER MEANINGS	55
B. NO_x CALCULATIONS	58
ONLY AN NO SENSOR FITTED	58
WORKING IN PPM: NOX REFERENCED TO NO	58
WORKING IN MG/M3: NOX REFERENCED TO NO OR NO ₂	58
WORKING IN MG/M3: REFERENCED TO NO	58
WORKING IN MG/M3: NOX REFERENCED TO NO ₂	59
NORMALISING READINGS	59
BOTH NO AND NO₂ SENSORS FITTED	59
WORKING IN PPM: NOX = NO + NO ₂	59
WORKING IN MG/M3	59
NOX = SUM	59
NOX = NO	59
NOX = NO ₂	59
NORMALISING READINGS	60
ONLY AN NO₂ SENSOR FITTED	60
NORMALISING READINGS	60
HIGH CO PURGE OPERATION	60
C. COMBUSTION EFFICIENCY CALCULATION	61
D. CALCULATION OF FUEL DATA	63
E. ELECTROMAGNETIC COMPATIBILITY (CE) STATEMENT	64

KANE9206 OVERVIEW

The KANE9206 is broadly based on the KM9106 and whilst retaining many of its core features has been significantly enhanced. The most visible difference is the large graphical display on the handset. Up to 15 lines of text/data can be displayed. The handset links to the main analyser unit using Bluetooth or the normal cable. It also has a USB connector to link to a PC via a cable and has an infra-red output to link to the portable Kane KMIRP-2 printer.

The main analyser unit also contains significant enhancements over the KM9106.

STANDARD FEATURES:

19301	Battery charger
18277	UK mains lead
18276	EU mains lead
18275	US mains lead
19332	Instruction manual

Kane 'LIVE' software download from Kane website

HANDSET: KBHS

Bluetooth and cable connectivity to analyser unit.
Bluetooth and USB connectivity to PC
GPS location
IR connectivity to Kane IRP portable printers
Monster data storage memory (64k records)
Graphical display with choice of large or small fonts.
Battery rechargeable via main unit or mains charger

MAIN ANALYSER UNIT: AS STANDARD KANE9206

Measures:

Oxygen
Ambient temperature
Atmospheric pressure
Inlet temperature
Flue temperature
Differential pressure

Features:

Main purge
Flow control*
NiMh battery packs
Plain paper printer

*Flow control

To compensate for different suction levels in flues, hose lengths and filter contamination levels, all of which can affect the flow of sample gases, there is an active flow control system fitted to the KANE9206.

It operates as follows:

Every time the instrument is turned on and finishes its first fresh air purge cycle from inside the analyser, it measures and records the pump pressure just prior to the sensor manifold whilst the pump is at 100% flow rate. During service calibration & normal use, the pump speed is automatically adjusted to 70% of the purge flow rate to maintain consistent flow.

The flow control can cope with typically 100 mbar suction in a flue and still maintain the same nominal flow as that present under ambient conditions.

OPTIONS:

ELECTROCHEMICAL SENSORS : (UP TO 5 SENSORS)

CHOOSE FROM:

KCO1/Q	carbon monoxide (H ₂ compensated)
KNO1L/Q	Nitric oxide (low range)
KNO1H/Q	Nitric oxide (high Range)
KNO2/Q	Nitrogen dioxide
KSO2/Q	Sulphur dioxide
KH2S/Q	Hydrogen sulphide

OTHER OPTIONS:

KHSA	Heater for toxic sensors
KHC/Q	IR triple bench (CO, HC, CO ₂)
KHPUR/Q	High/low CO protection (solenoid and pump)
WTS9206P	Pumped water trap
KMHL3000	Heated line
KMHP1200	Heated probe
KMDM220	Gas Conditioning Module

PROBE OPTIONS:

KMCHLP6	High temperature 1 metre removable shaft
KMCHP6	High temperature 285mm removable shaft
KMCHSLP6	Smoke probe with high temperature 1 metre removable shaft
KMCHSP6	Smoke probe high temperature 285mm removable shaft
KMCSP6	Smoke probe with 285mm removable shaft
KMCLP6	1 metre removable shaft
KMCP6	285mm removable shaft

SPARE PARTS LIST:

OS11	Oxygen Sensor
IMP3R	Printer ribbon
IMP10P	Printer paper
SF1/5	Chemical filter
AF2	Particle filter assembly
PF2/10	Particle filter filter pack
WN8	Water trap filter pack
BP9206	Battery pack
WTS9106	Water trap assembly
19403	Peri pump tubing

KANE9206 WITH KANELIVE PC SOFTWARE

KANELIVE is a free download that runs on Windows based PCs and allows live display and graphing of data. It can be downloaded from the Kane website (www.kane.co.uk) once an analyser has been registered in the MY KANE section of the website.

In the current configuration, the handset needs to be connected to the main unit by a cable and the Bluetooth setting for the handset needs to be changed to TO PC using MENU, SETUP, BLUETOOTH SETUP.

Once this has been selected, go to the PC and select MY BLUETOOTH PLACES.

Click ADD A BLUETOOTH DEVICE.

All Bluetooth devices within range will be displayed in icon form. The KANE9206 handset will be displayed as:

KANE9206HS
999999107

where the 9 digit number is the serial number of the handset.

Double click on this. Now follow the instructions.

Then enter the passkey: 1111

Click on the TICK BOX and then AT SERIAL CONFIGURE and then FINISH.

Now click on KANELIVE to initiate the programme.

Select your analyser type by clicking on the analyser name displayed on the middle of the bottom line of the screen. If more than one analyser has been enabled a drop down will appear. Click on the analyser of your choice.


Then click CONNECT and wait for its colour to change to green.

Then click START which will change to green.


After a few seconds live data will be displayed.

ANALYSER LAYOUT AND FEATURES



HANDSET FEATURES

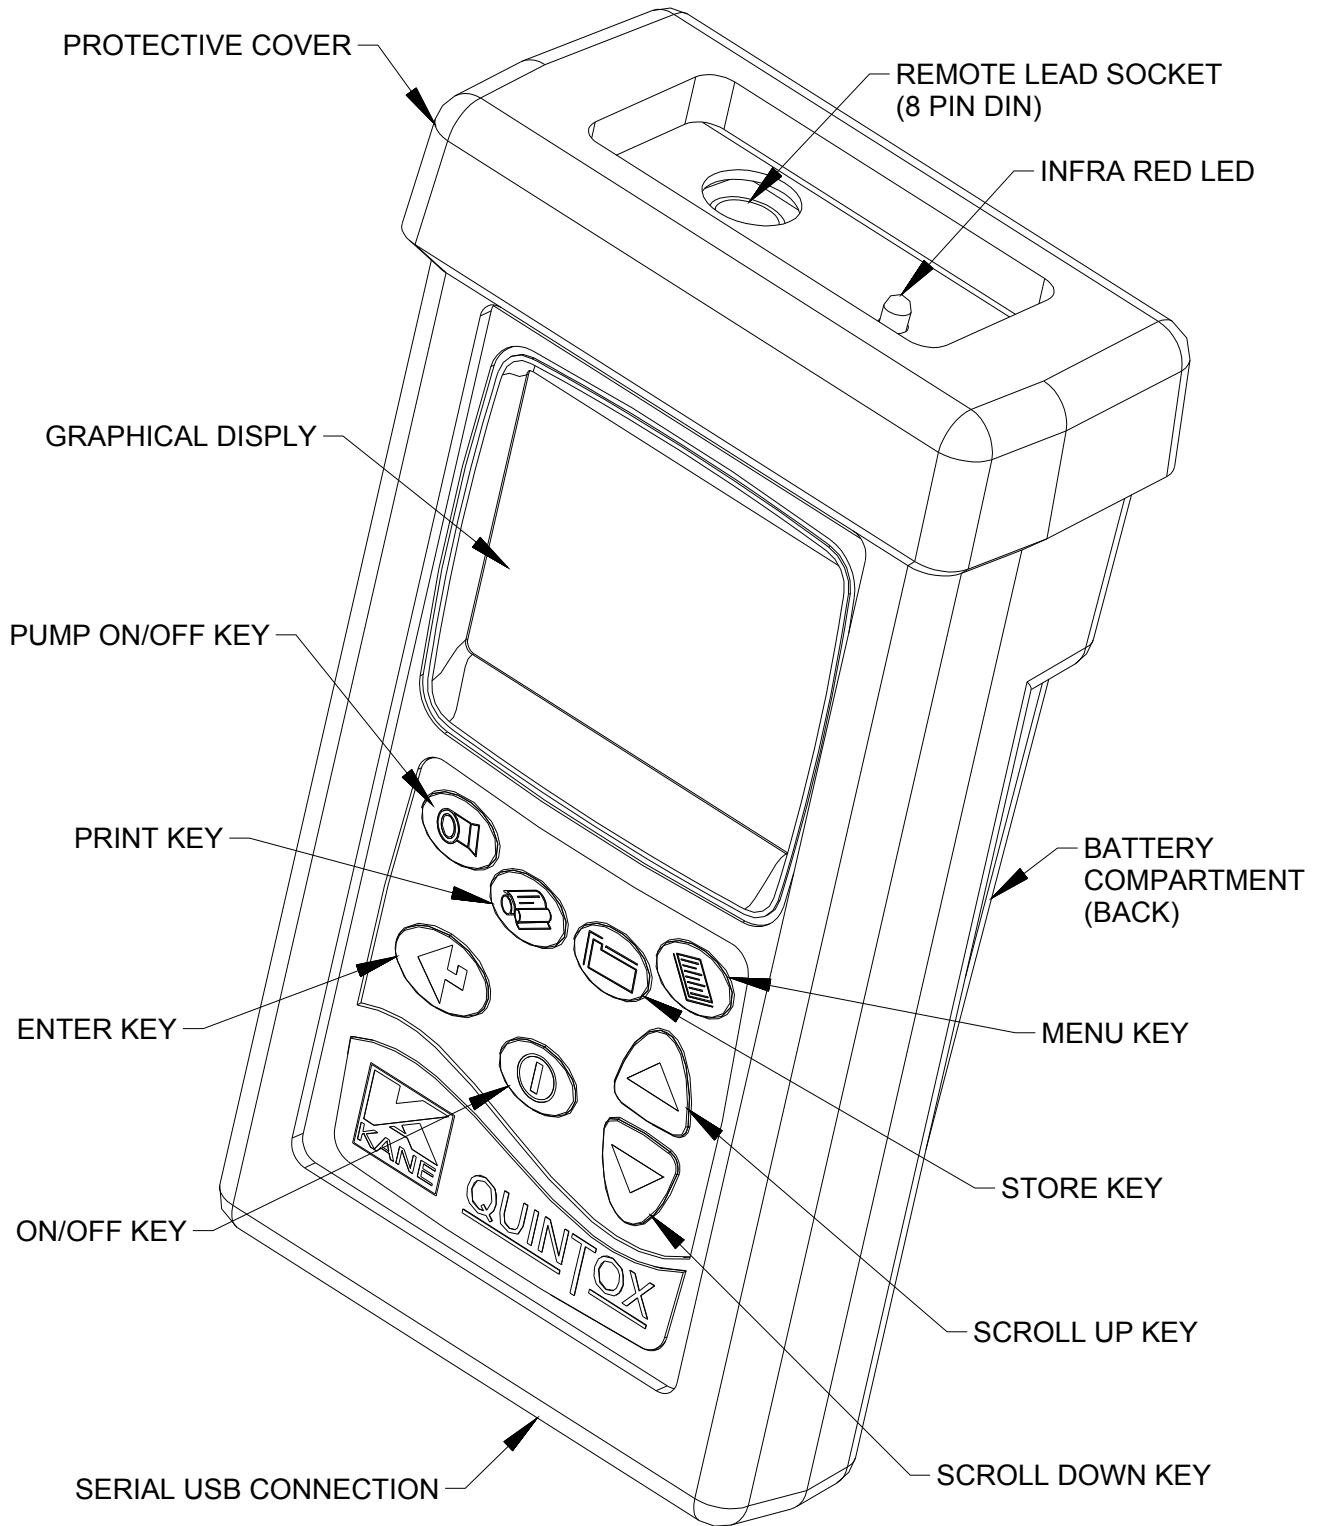


ANALYSER LAYOUT

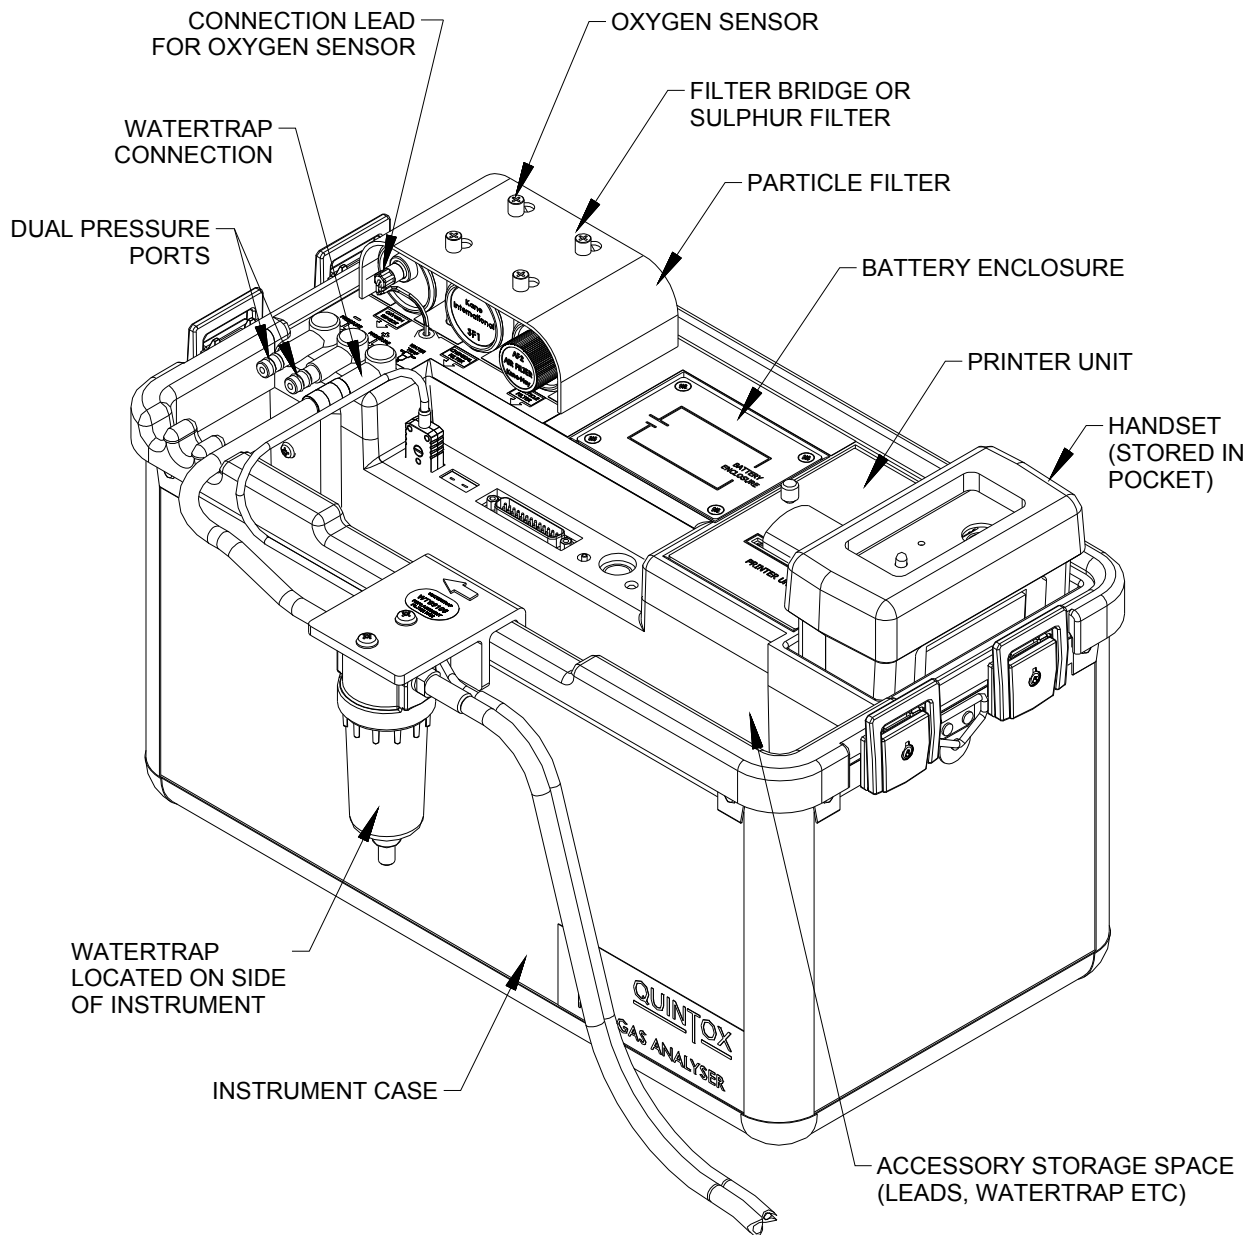


ANALYSER LAYOUT WITH KMDM220 GAS CONDITIONING MODULE FITTED

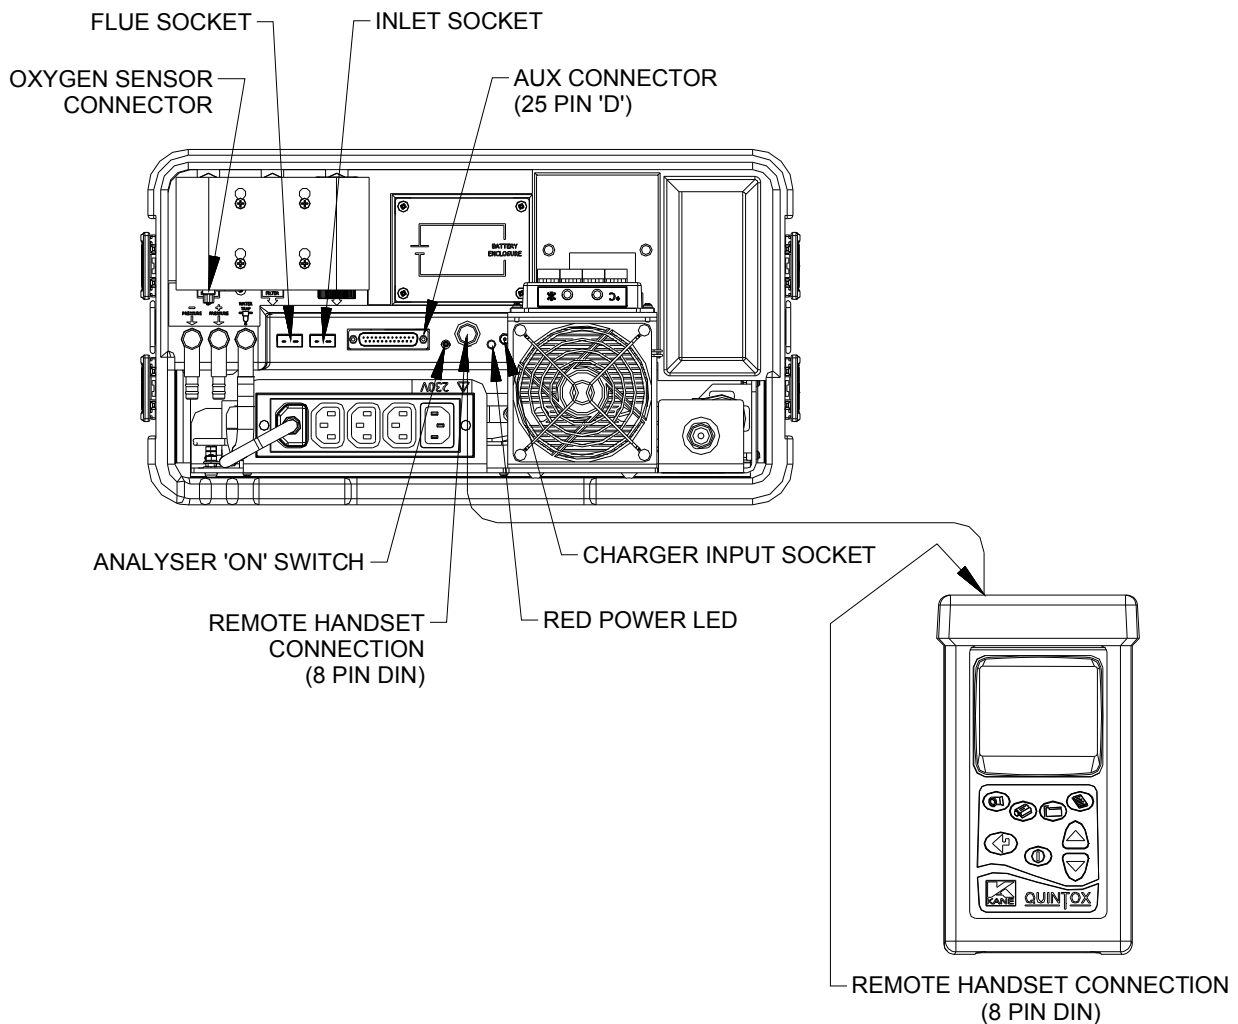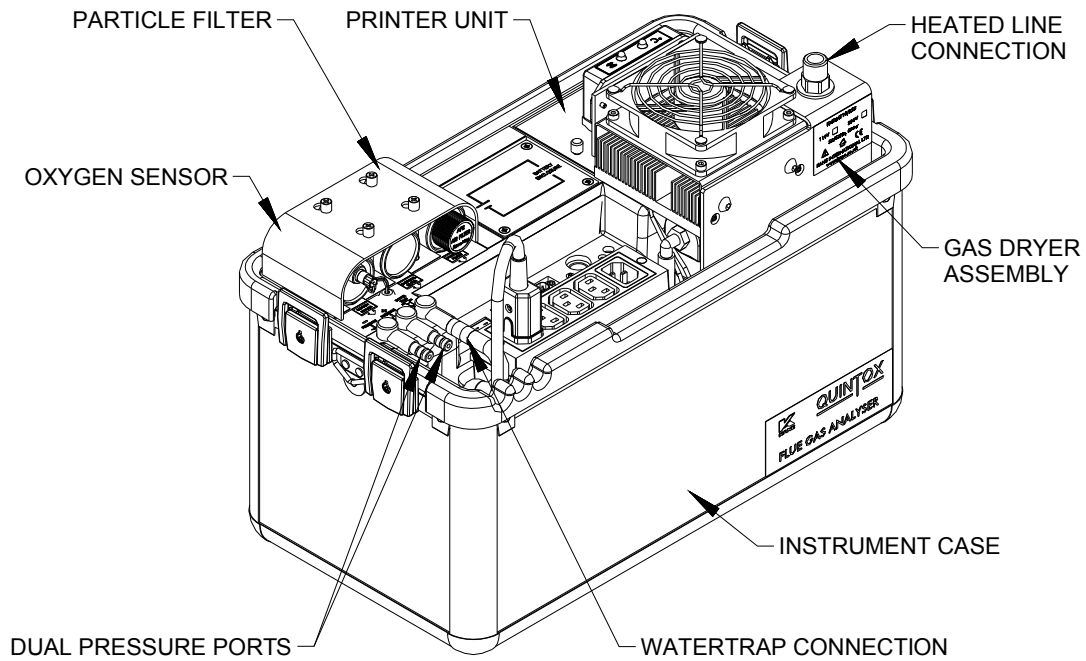

TYPICAL PROBE CONFIGURATION (KMCP6)

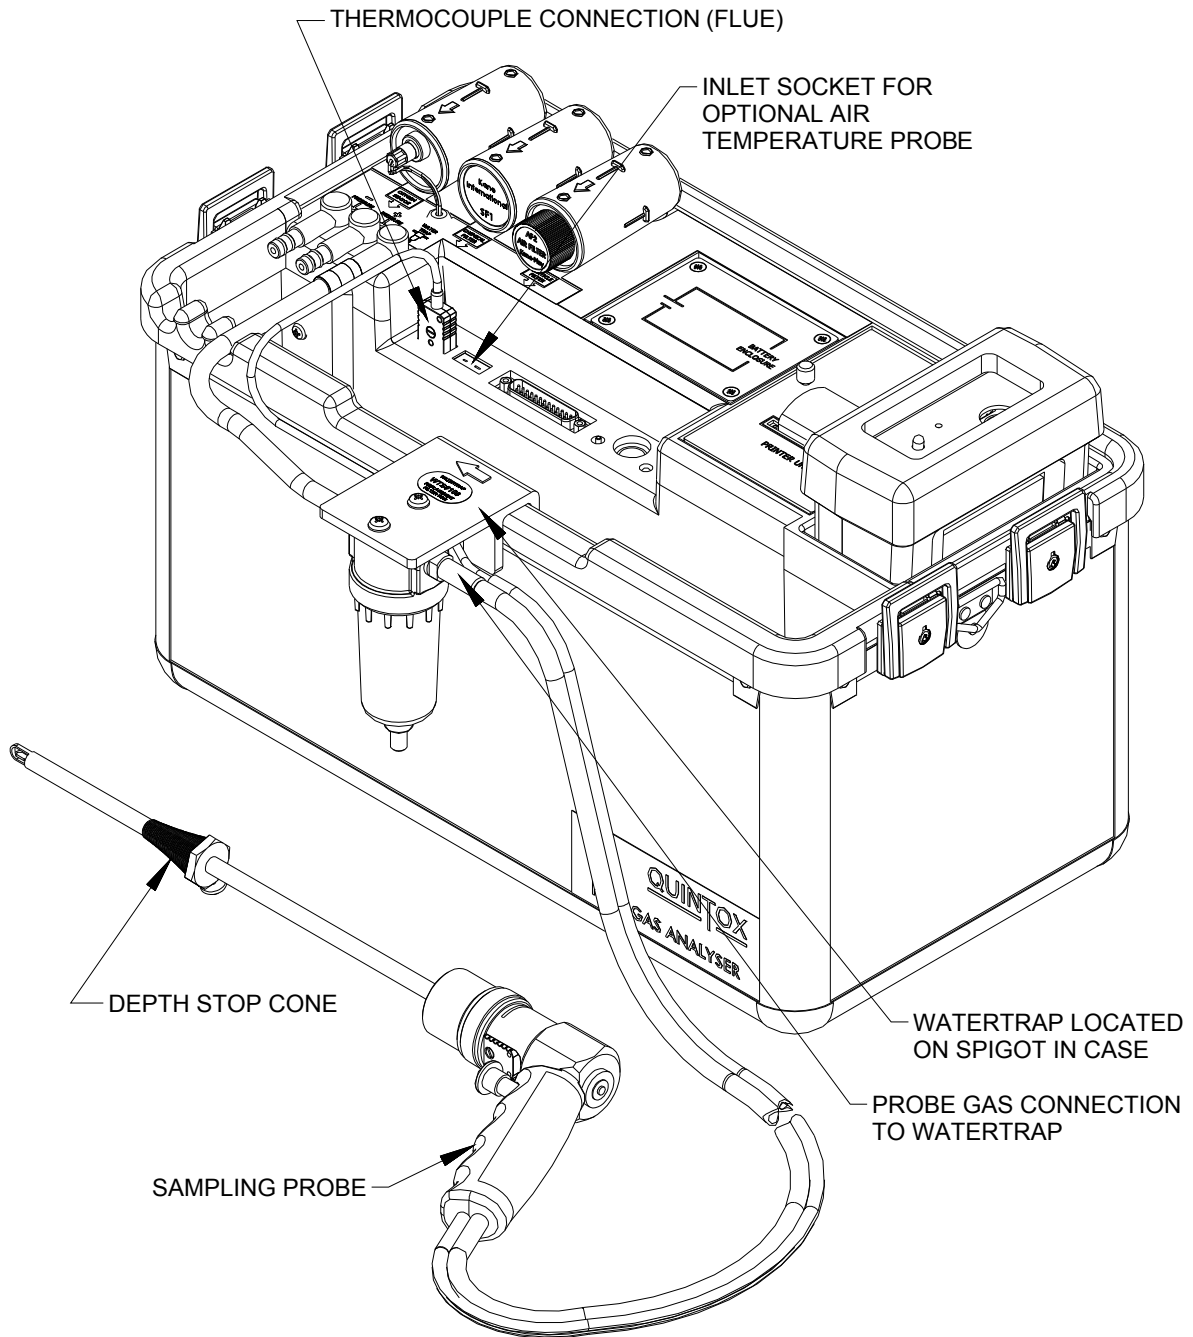

ANALYSER CONNECTIONS

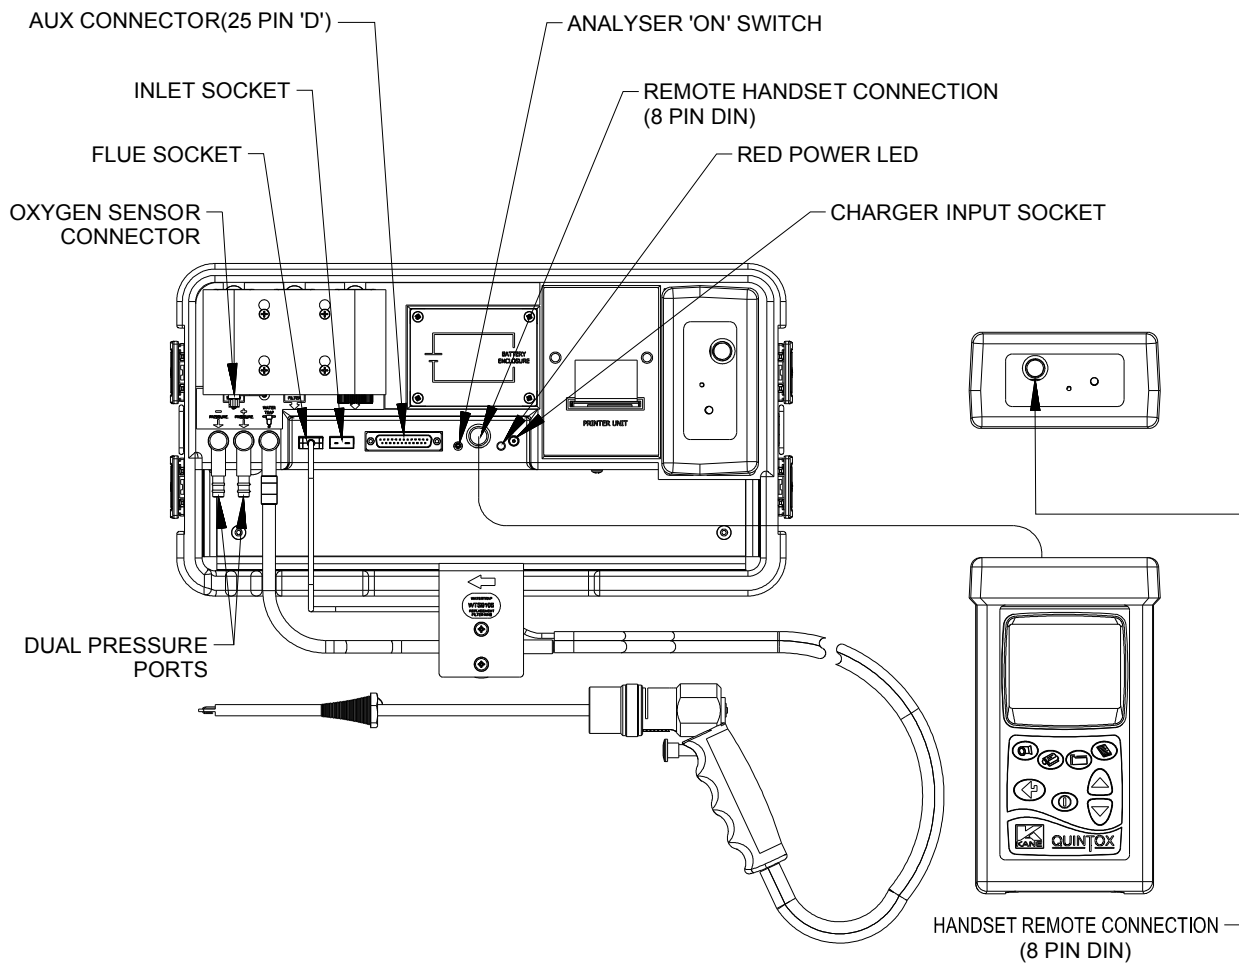

GETTING STARTED

Check that you have all the items you have ordered.

Before attempting to use the analyser to take readings it is recommended that the batteries are fully charged.

When the charger is connected to the analyser and powered up the red LED by the charger socket will flash until the batteries are fully charged. Once the batteries are fully charged the LED will no longer be illuminated.

To charge the handset; connect the handset to the main analyser unit using its cable. Whilst switched off, but charging, the display will show the Kane logo and a battery charging icon in the bottom right hand corner of the handset screen. Note: the handset battery is charged via the external battery charger and not from the analyser's internal battery. Once the handset battery is fully charged the icon will disappear from the screen.

The handset can also be charged directly using the mains charger as used for the analyser.


BEFORE TAKING READINGS

You need to establish the current set up of the analyser and then make the changes that you need to suit exactly what you want to do.

So press the MENU key and then select STATUS as described below.

MENU: ALL THE OPTIONS

Press the MENU key.

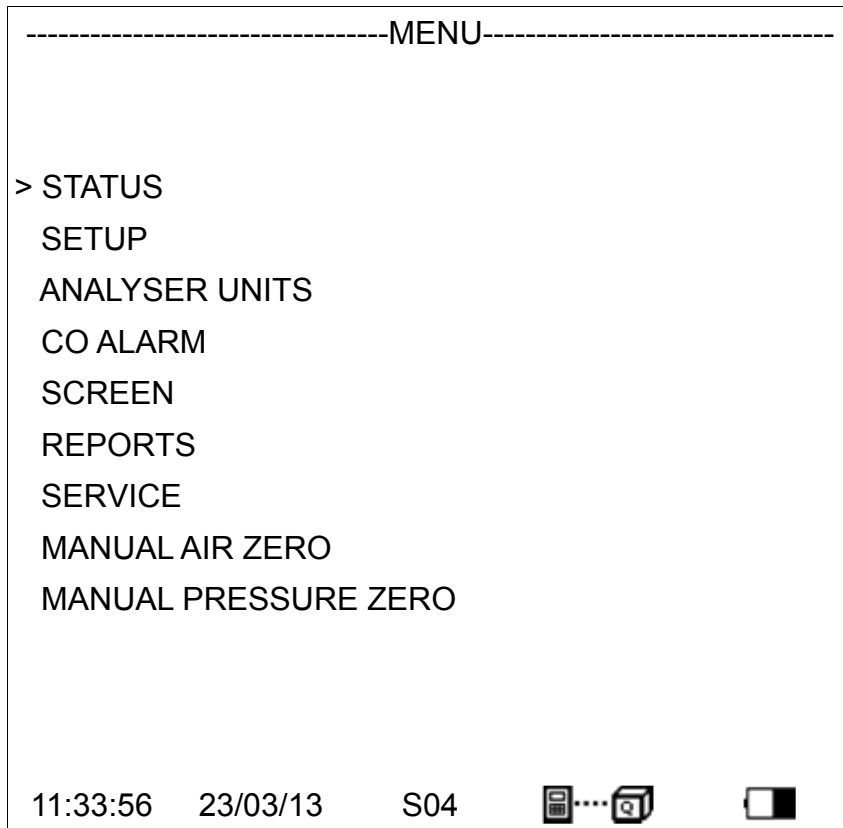

The > symbol acts as the cursor. It can be moved up or down by pressing the UP or DOWN keys.


Having made a selection press the ENTER key.

The bottom line of this screen lists:

- the time
- the date
- the number of satellites being received
- the Bluetooth connection status
- the estimated charge in the handset battery

STATUS: ESTABLISHING THE ANALYSER'S SET-UP


Press MENU and then select STATUS by pressing ENTER.

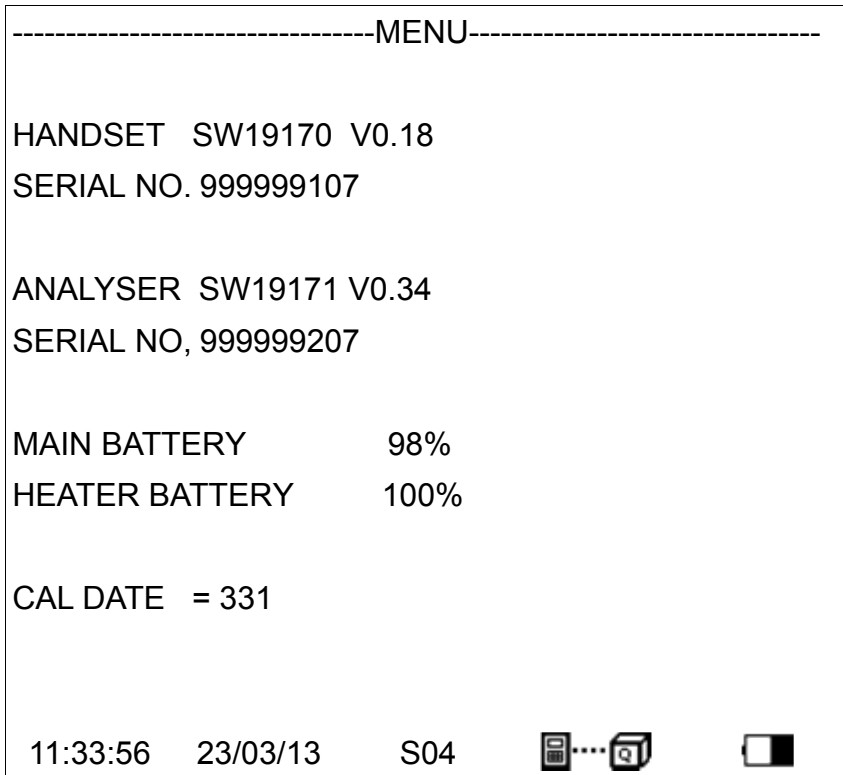


This screen lists :

- the software version in the handset
- the handset serial number
- the analyser unit software version number
- the analyser unit serial number
- the estimated charge in the main battery
- the estimated charge in the heater battery (if fitted)
- the number of days before annual re-calibration is due

Press DOWN to move to the next screen.

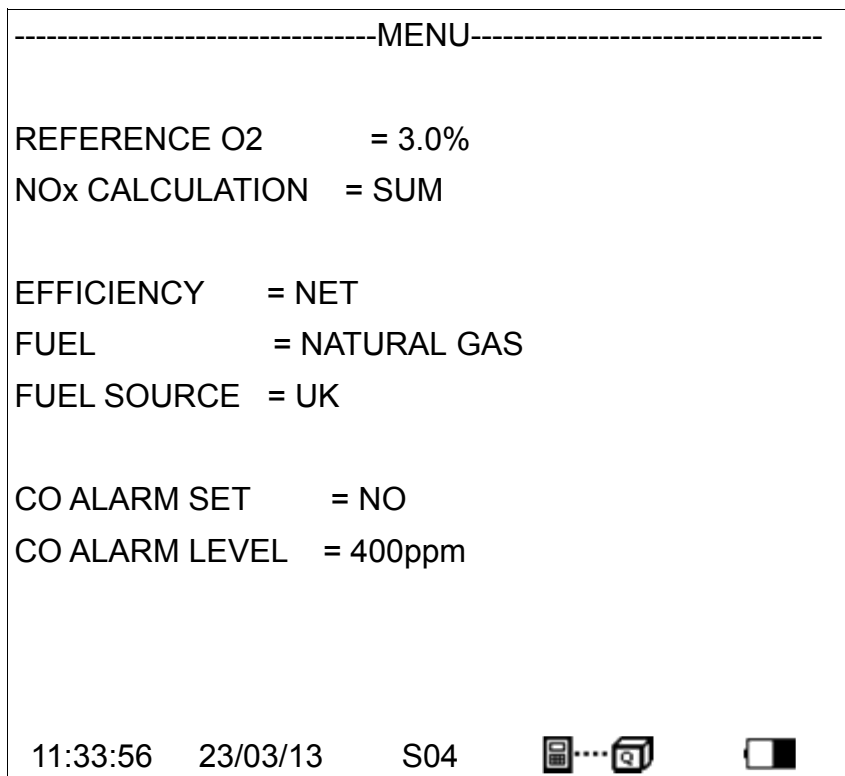

Press DOWN to move to the next screen.

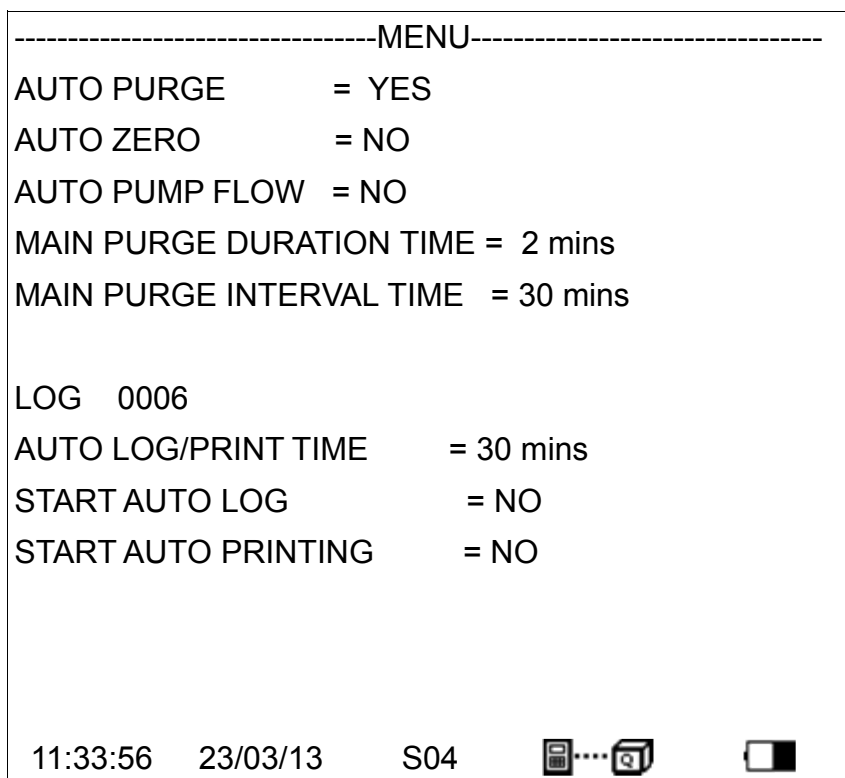


Press DOWN to move back to the first screen.

Press PRINT to print this status on the analyser's printer.

Press MENU to EXIT.

SETUP: CONFIGURING THE ANALYSER'S SETUP

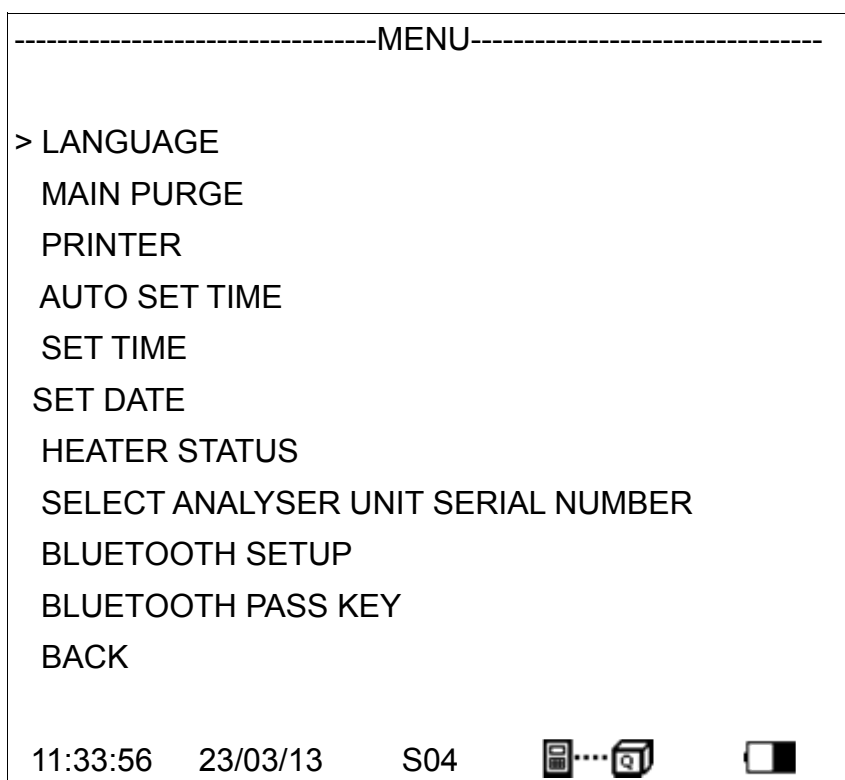


LANGUAGE:

Align cursor using UP or DOWN keys, then press ENTER.

Use UP or DOWN keys to scroll through the selection.

Press ENTER to select.

MAIN PURGE:

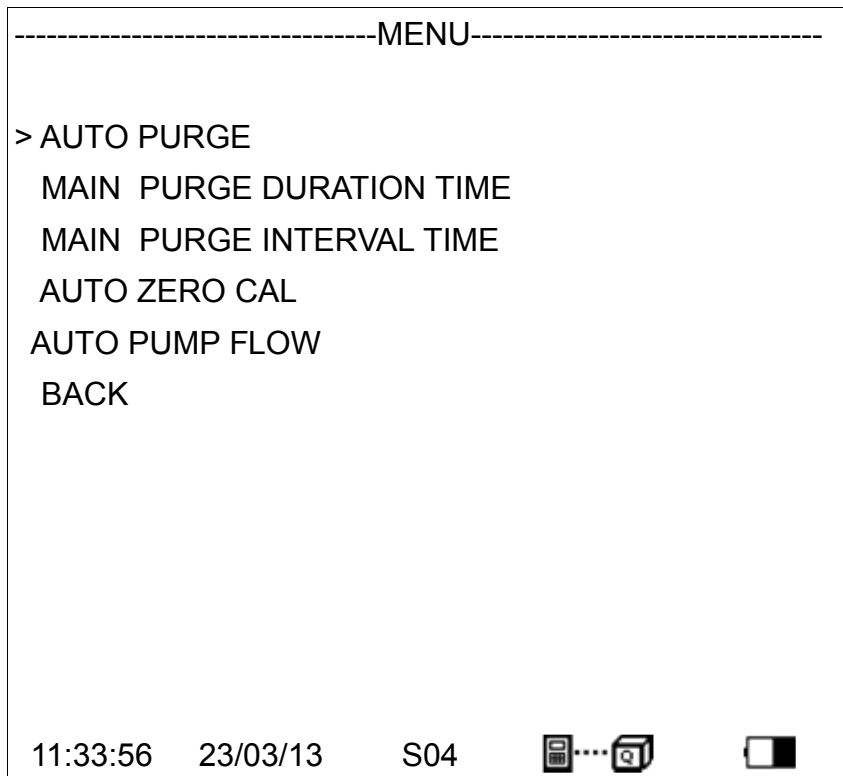

AUTO PURGE:

Set YES or NO

AUTO PURGE DURATION TIME:

Set fresh air purge duration to between 2 and 30 minutes

MAIN PURGE INTERVAL TIME :

Set the interval between fresh air purges to between 10 and 120 minutes.

AUTO ZERO CAL:

Set YES or NO to automatically re-zero sensors at the end of a main purge cycle.

AUTO PUMP FLOW:

Set YES or NO to automatically control the pump flow. This may be required for some regulatory test protocols

After switch on, the first purge interval is automatically set to 10 minutes if the optional IR module is fitted. Changes in the purge interval are implemented after completion of the next purge cycle. To implement a change immediately do a "MANUAL AIR ZERO".

PRINTER:

This sets the destination for outputs from the handset

The choices of outputs are:

- KANEIRP
- KANEIRP-2
- ANALYSER PRINTER
- SERIAL
- BLUETOOTH

Use UP or DOWN keys to scroll through the selection. Press ENTER to select,

AUTO SET TIME:


This function is locked off if reports have been stored. To allow the function to operate, delete the reports.

This allows the time to be set automatically from the GPS signals. Select NO to maintain manual setting

Use UP or DOWN keys to scroll through the selection. Press ENTER to select,

SET TIME:

This function is locked off if "AUTO SET TIME" is activated or reports have been logged. If this function is locked, delete the reports.

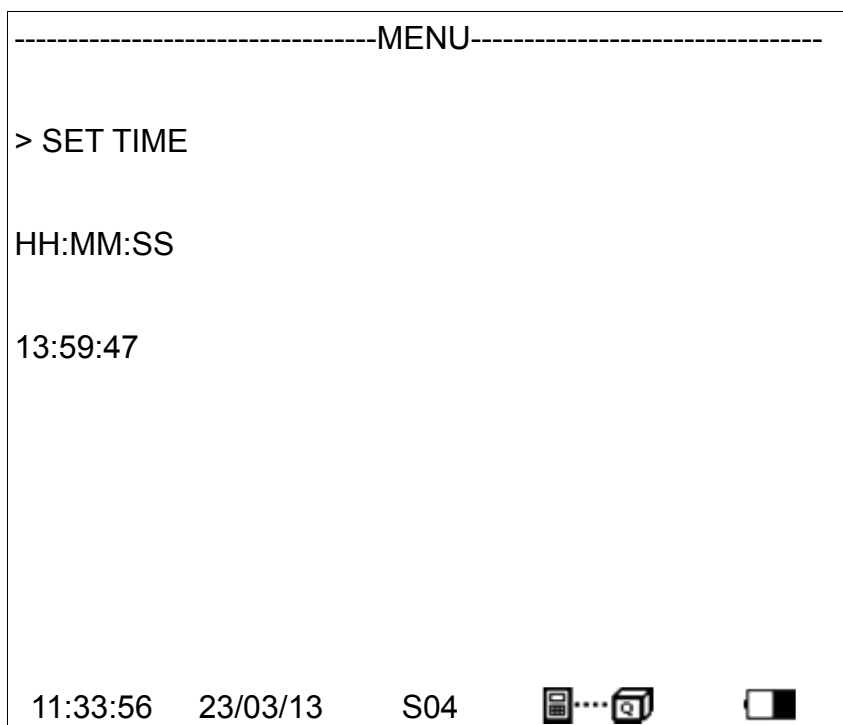


If manual setting is enabled use UP or DOWN keys to change values.

Press ENTER to select.

SET DATE:

This function can only be set manually, not by GPS.

If this function is locked, delete the reports.

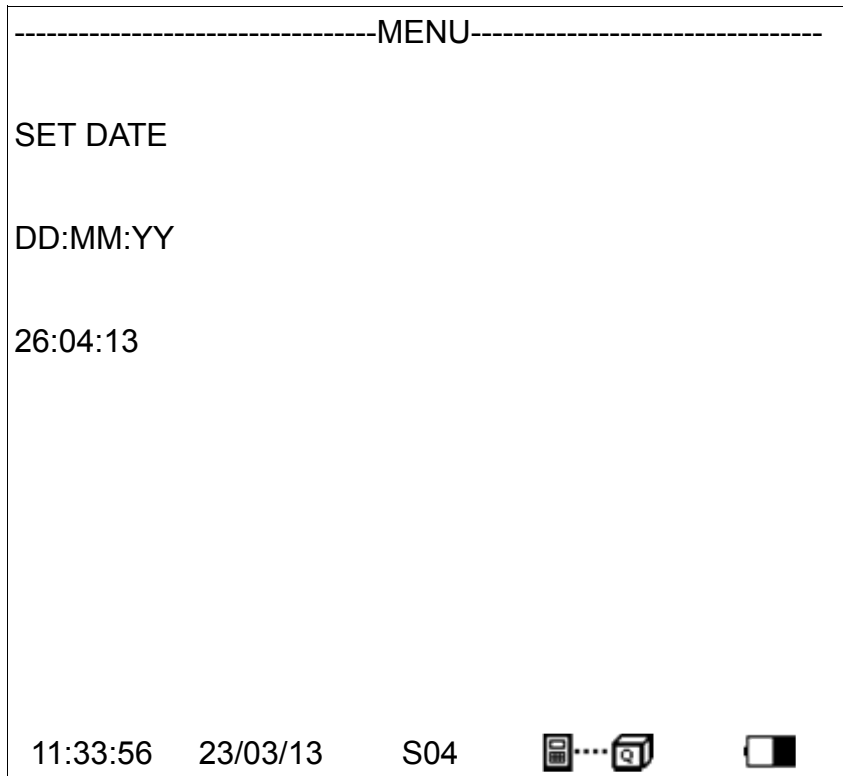

If manual setting is enabled use UP or DOWN keys to change values.

Press ENTER to select.

HEATER STATUS:

Allows the heaters to be switched off totally or to operate automatically.

Use UP or DOWN keys to scroll through the selection. Press ENTER to select,

SELECT ANALYSER UNIT SERIAL NUMBER:

If more than one analyser unit is within Bluetooth range the handset needs to be set to communicate with the correct unit,

Use UP or DOWN keys to scroll through the selection. Press ENTER to select,

BLUETOOTH SET UP:

The handset can communicate with an analyser unit or a PC. Bluetooth can also be switched off and a cable can be used.


Use UP or DOWN keys to scroll through the selection. Press ENTER to select,

BLUETOOTH PASSKEY:

This confirms the Passkey setting.

The Bluetooth Passkey is 1111.

ANALYSER UNITS: CONFIGURES ALL THE DATA SOURCES AND SETTINGS

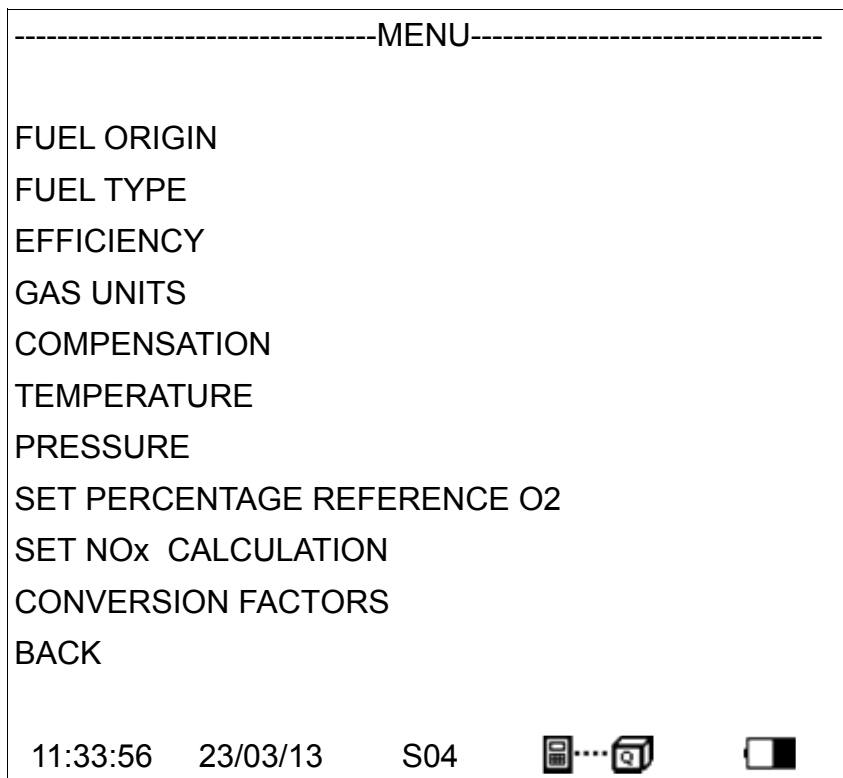

FUEL ORIGIN:

Select from a list of country specific fuel tables.

Use UP or DOWN keys to scroll through the selection. Press ENTER to select,

FUEL TYPE:

Select from the list of fuel types associated with the chosen origin. The K values for the selected fuel are also shown.

Use UP or DOWN keys to scroll through the selection. Press ENTER to select.

There are 5 User Fuels that can be loaded from a PC. The title of these user fuels can be edited using the keypad on the handset.

Use UP or DOWN keys to scroll through the selection. Press ENTER to select.

EFFICIENCY:

Select NET or GROSS efficiency calculation

Use UP or DOWN keys to scroll through the selection. Press ENTER to select,

GAS UNITS:

Select ppm or ppmn or mg/m³ or mg/m³n.

Use UP or DOWN keys to scroll through the selection. Press ENTER to select,

TEMPERATURE:

Allows the selection of Fahrenheit or Celsius.

Use UP or DOWN keys to scroll through the selection. Press ENTER to select,

PRESSURE:

Allows the selection of pressure units.

Select from: mbar, In H₂O, mm H₂O, hPa, psi,.

Use UP or DOWN keys to scroll through the selection. Press ENTER to select,

SET PERCENTAGE REFERENCE O₂:

Can be set between 0% (equivalent to OFF) and 10%.

Use UP or DOWN keys to scroll through the selection. Press ENTER to select,

SET NOX CALCULATION:

Select from: SUM, NO₂ or NO

Set REFERENCE NO_x to the percentage required or defined by local regulations. Typically 5% NO₂ is added to an NO reading. The value can be user set.

SUM adds the readings from an NO sensor and an NO₂ sensor when fitted

NO calculates an NO_x reading from the NO reading where $NO_x = NO \times 1.1$


NO₂ calculates an NO_x reading from the NO₂ reading where $NO_x = NO_2 \times 2.05$

Use UP or DOWN keys to scroll through the selection. Press ENTER to select,

CONVERSION FACTORS:

Display the Propane Equivalency Factor PEF and the Methane Equivalency Factor for the IR module (if fitted) and the pitot factor – change from 0.10 to 1.00 as determined by the pitot tube being used.

CO ALARM:

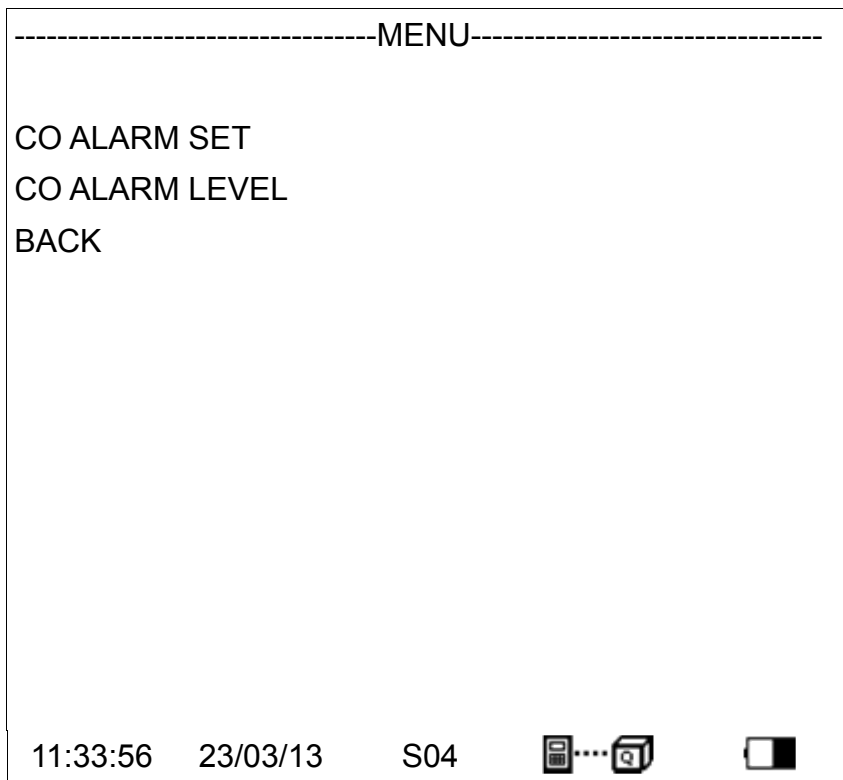

CO ALARM SET:

Switch the alarm ON or OFF.

Use UP or DOWN keys to scroll through the selection. Press ENTER to select.

CO ALARM LEVEL:


Allows a specific CO level in ppm to be set as the alarm trigger point.

Use UP or DOWN keys to change the digits. Press ENTER to select and move to the next digit.

The display will show '++++' when the CO alarm is triggered.

SCREEN:

The screen display is fully configurable.

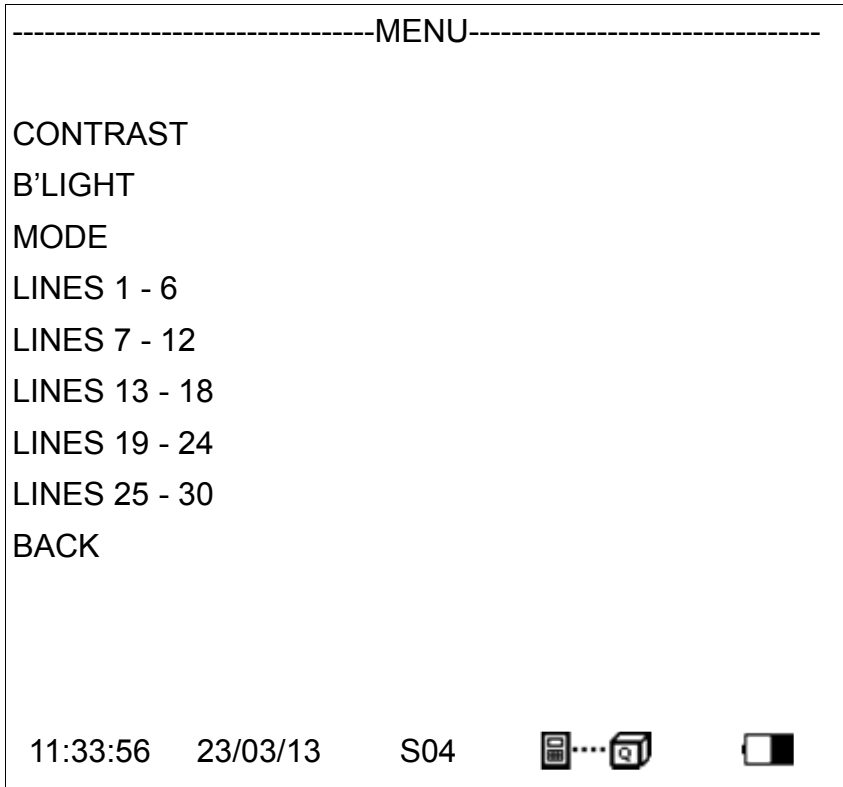

CONTRAST:

Allows the display to be darkened or lightened. Default value is 14.

Use UP or DOWN keys to change the digits. Press ENTER to select and move to the next digit.

B'LIGHT:

The switch off time for the backlight can be set for between 30 and 300 seconds,

Use UP or DOWN keys to change the digits. Press ENTER to select and move to the next digit.

During normal measurements press ENTER to switch the backlight on.

MODE:


The main display can be set for SMALL font or LARGE font.

LINES:

This feature allows users to customise the screen display to suit their own requirements.

Use UP or DOWN keys to change the selection. Press ENTER to select and move to the next digit.


So for Lines 1-6, the screen shows:

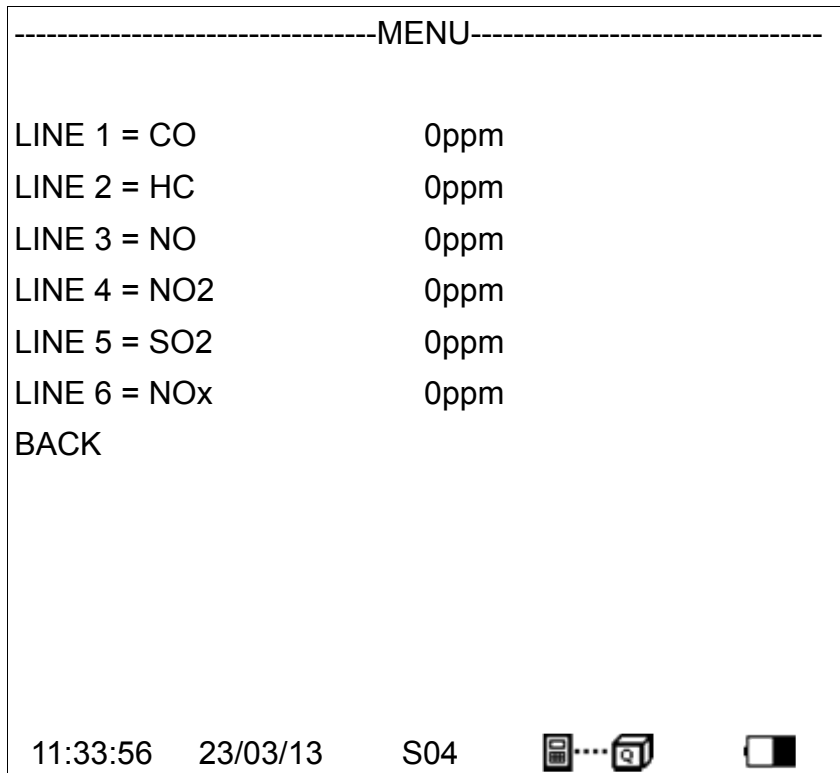

The parameter to be displayed on each line can be individually selected.


Use UP or DOWN keys to change the selection. Press ENTER to select and move to the next digit.

REPORTS: CONFIGURES REPORTS

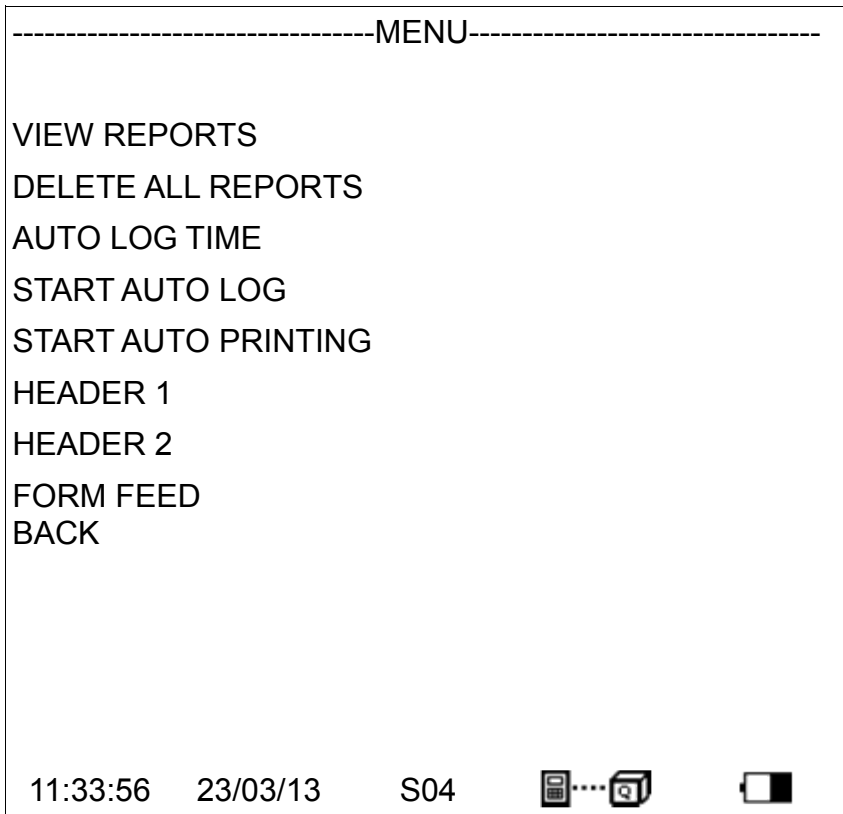

VIEW REPORTS:

This selection displays a 'main screen' with a LOG No near the top left hand of the display. This number can be changed using UP or DOWN and the display automatically changes.

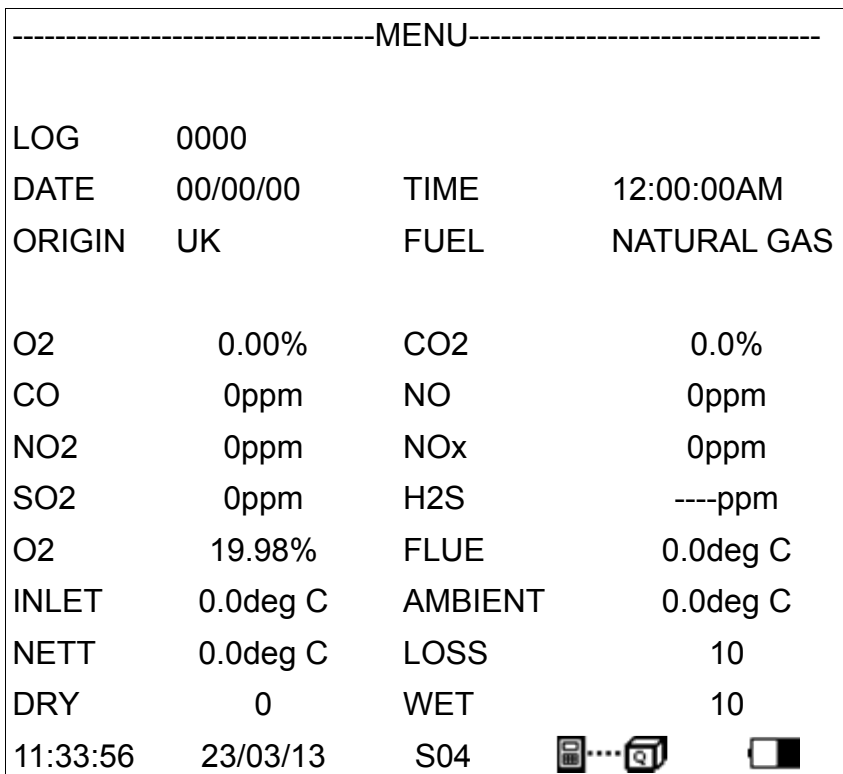

DELETE ALL REPORTS:

All reports can be deleted. A confirmation YES is required

Use UP or DOWN keys to scroll through the selection. Press ENTER to select,

AUTO LOG TIME:

Automatic logging/printing can be selected for intervals between 10 seconds and 90 minutes

Use UP or DOWN keys to scroll through the selection. Press ENTER to select,

START AUTO LOG:

Select YES or NO.

Use UP or DOWN keys to scroll through the selection. Press ENTER to select,

START AUTO PRINTING:

Select YES or NO.

Use UP or DOWN keys to scroll through the selection. Press ENTER to select,

HEADER 1: 16 CHARACTERS

Allows the printed header line: YOUR COMPANY to be changed.

Use UP or DOWN keys to change the characters. Press ENTER to select and move to the next character.

HEADER 2: 16 CHARACTERS

Allows the printed header line: NAME & PHONE No. to be changed.

Use UP or DOWN keys to change the characters. Press ENTER to select and move to the next character.

FORM FEED:

Allows remote paper feeding on printers.

SERVICE:

CODE: For use by authorised service agents.

CAL DATE = number of days before annual re-calibration is due.

MANUAL AIR ZERO:

Select this and press ENTER to initiate a fresh air purge and sensor zeroing

MANUAL PRESSURE ZERO:

Select this and press ENTER to re-zero the pressure sensor

BEFORE USING THE ANALYSER FOR THE FIRST TIME.



SAFETY WARNING

This analyser extracts combustion gases that may be toxic in relatively low concentrations. These gases are exhausted from the bottom of the instrument. This instrument must only be used in well ventilated locations. It must only be used by trained and competent persons after due consideration of all the potential hazards.

FIRST TIME USE

Charge the batteries for 12 hours, following this an overnight charge should be sufficient for an average 8 hour day. There may be three battery packs that need charging, the main battery, the optional heater battery and the handset battery. The handset battery can use the same charger as the analyser unit or can be charged via the main unit using a handset lead. All batteries are NiMh.

Whilst charging the red LED will flash.

We offer a wide choice of probes which are not supplied as standard and must be ordered as a separate item.

Take time to read this manual fully.

TIP: Take a look at the Spare Parts list and order some replacement filters and paper rolls now.

NORMAL START UP SEQUENCE

EVERY TIME YOU USE THE ANALYSER

BEFORE SWITCH-ON CHECK THAT:

- the oxygen sensor is connected
- the particle filter is not dirty
- the sulphur filter is fitted for heavy oil or coal
- the water trap and probe line are empty of water


- all hose connections, etc, are properly made
- the paper roll is fitted
- the analyser unit is in fresh air
- the water trap is vertical
- the flue temperature is connected
- the instrument is placed on a clean, flat, level surface

Switch ON the analyser by pressing ON/OFF on the handset. You also need to press the ON/OFF switch on the analyser main unit.

AUTOMATIC CALIBRATION

During this sequence the analyser pumps fresh air into the sensors to allow toxic sensors to be set to zero and the oxygen sensor to be set to 20.9 %.

During this sequence the handset display will show the following:

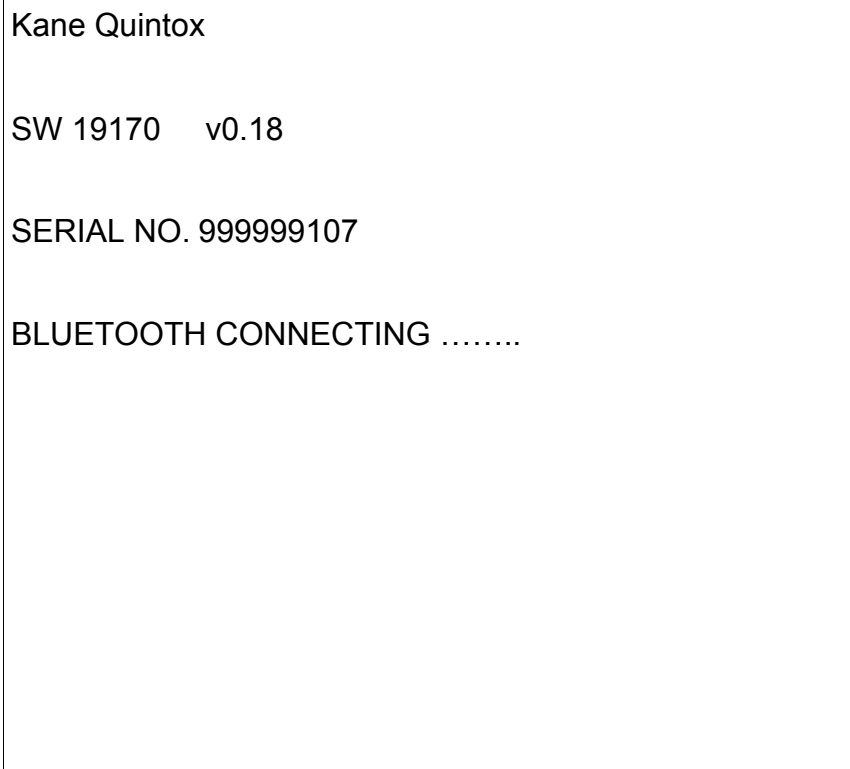

Kane Quintox


SW 19170 v0.18

SERIAL NO. 999999107

BLUETOOTH CONNECTING

Note: The software version number and serial number are examples only.

If there is no Bluetooth communication between the handset and the main unit the following will appear on the screen.

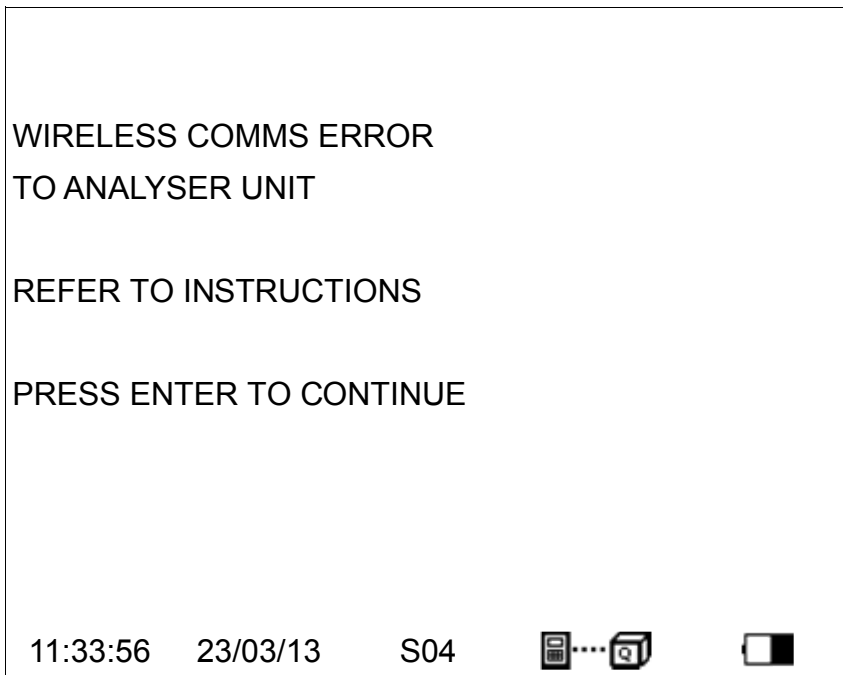




Press ENTER to continue and follow the instructions.

Once Bluetooth communication is established the main measurement screen will appear:

MAIN MEASUREMENT SCREEN

IN SMALL FONT MODE

ZERO TIME 60M			
CO2	----%	NETT	-N\F-deg C
HC	----ppm	LOSS	----
CO	0ppm	DRY	----
NO	0ppm	WET	-N\F-
NO2	0ppm	CO LOSS	0%
NOx	0ppm	P INDEX	0.00%
SO2	0ppm	CO/CO2	R0.0000
H2S	----ppm	EFF (G)	----%
O2	19.98%	XAIR	----%
FLUE	-N\F-deg C	PRESSURE	0.00mbar
INLET	20.3 deg C	ATM	986.6mbar
AMBIENT		GPS (X)	-00011.458
11:33:56	23/03/13	S04	  

TOP LINE: shows status messages

GASES: O₂ and CO₂ are shown in %
 other gases shown in ppm or other user selected units
 CO can be shown in % if optional IR bench fitted




TEMPERATURES: displayed in C or F. N\F = not fitted
 ---- occurs for calculations when N\F applies




---- occurs when a calculation cannot be made due to an out of range value (Eg zero)

Atmospheric pressure (ATM) is always displayed in mbar.

IN LARGE FONT MODE




There are 5 screens that are accessed using the UP or DOWN keys

```
-----MENU-----  
  
> LINE 1= CO2      ----%  
  LINE 2= HC       ----ppm  
  LINE 3= CO       0ppm  
  LINE 4= NO       0ppm  
  LINE 5= NO2     0ppm  
  LINE 6= NOx     0ppm  
  BACK  
  
11:33:56  23/03/13  S04    
```

```
-----MENU-----  
  
> LINE 7= SO2      0ppm  
  LINE 8= H2S     ----ppm  
  LINE 9= O2      19.98%  
  LINE 10= FLUE   -N\F-deg C  
  LINE 11= INLET  -N\F-deg C  
  LINE 12= AMBIENT 20.3deg C  
  BACK  
  
11:33:56  23/03/13  S04    
```




-----MENU-----

> LINE 13= NETT -N\F-deg C
 LINE 14= LOSS -----
 LINE 15= DRY -----
 LINE 16= WET -N\F-
 LINE 17= CO LOSS 0%
 LINE 18= P INDEX 0.00%
 BACK

11:33:56 23/03/13 S04   




-----MENU-----

> LINE 19= CO/CO2 R0.0000
 LINE 20= EFF (G) -----%
 LINE 21= XAIR -----%
 LINE 22= PRESSURE 0.00mbar
 LINE 23= ATM 986.6mbar
 LINE 24= GPS (X) -00011.458
 BACK

11:33:56 23/03/13 S04   

-----MENU-----


> LINE 25= GPS (Y) +5148.0957
 LINE 26= MAIN BAT 24%
 LINE 27= HEAT BAT 100%
 LINE 28=
 LINE 29=
 LINE 30=
 BACK

11:33:56 23/03/13 S04   

SAMPLING THE FLUE GAS

Once the automatic calibration procedure has been completed and the specific fuel has been selected the probe can be inserted into the desired sampling point.

It is recommended that the sampling point be located at least two flue diameters downstream of any bend and that the probe tip is in the centre of the flue (this is normally the point of the hottest temperature). With balanced flues and other industrial units the probe should be positioned far enough into the flue so that no air can 'back flush' into the probe.

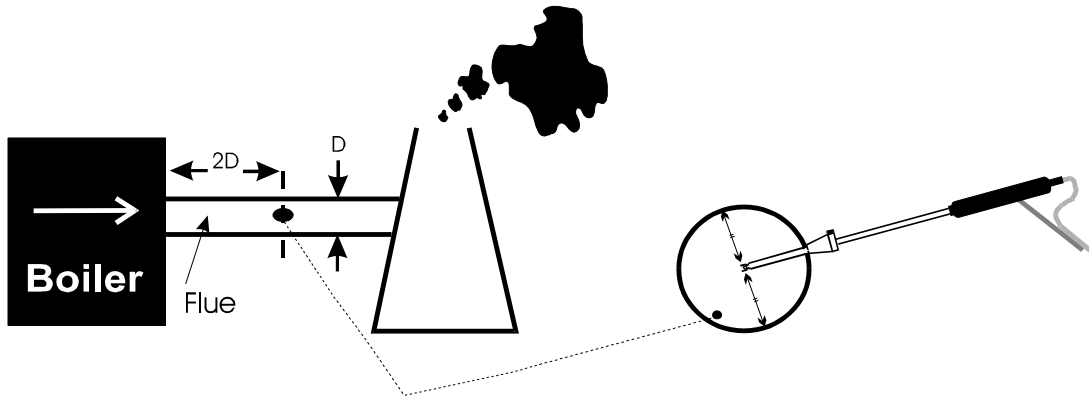

The probe depth stop cone provided with the instrument allows the probe to be used in holes whose diameters range from 8 mm to 21 mm ($\frac{5}{16}$ to $\frac{4}{5}$ inch).

The standard probe is rated at 650°C/1202°F. Temperatures of up to 1100°C/2012°F can be accommodated using an optional high temperature probe.

TIP: To conserve battery power, switch off the pump when you are not taking a measurement. Use the pump key to turn the pump ON and OFF.

LONG TERM MONITORING

There are a number of things that need to be considered for successful long term unattended monitoring:

- The provision of enough power for the duration of the test
- The capability to empty the water trap
- Regular fresh air purging of the sensors
- **Protection from rain or water spray from the process being monitored.**



If a mains power source is being used it is strongly recommended that the supply cable is protected by a suitable Residual Current Device (RCD).

Unless the water trap is to be regularly inspected then a pumped water trap should be fitted.

Electrochemical sensors need regular refreshing with fresh air, preferably at around 50% RH. They also need a small percentage of oxygen to be present in the sampled gas. If there is zero oxygen the output from the sensors will decay over time (10 mins or so). In such circumstances, fresh air purge should be programmed for a 50% duty cycle every 10 minutes.

The longest sampling time without purging should be limited to 2 hours and then purge for 30 minutes.

When the KHC infra-red module is fitted, for maximum accuracy it is recommended that purging occurs every 30 minutes.

KMDM220 GAS CONDITIONING MODULE

This module is fitted in the front compartment of a standard KANE9206 carry case and comprises a Peltier fan cooled chiller assembly, a peristaltic pump to automatically remove condensate, the control electronics and a power supply module. The module is supported on an aluminium alloy chassis.

The chiller is connected to a flue mounted electrically heated probe (KMHP1200) by a 3 metre long heated line with automatic temperature control (KMHL3000). Because the gas that is extracted from the flue is maintained at 120°C no condensation occurs in the probe or the hose and so no sample gas is lost in the condensate. The chiller flash cools the sample gas to below the ambient dewpoint and any water in the gas immediately condenses. The condensate is then pumped away using a peristaltic pump. Because the gas has no chance to remain in contact with the condensate, volatile sample gas is not lost into the condensate. The chilled gas then naturally warms up as it passes through the sampling pump to the sensors and as it does so its humidity reduces and there is no risk of further condensation.

SETTING UP KMDM220

The heated sample probe must be connected to the top of the heated line and a gas tight connection be made without over tightening the connections. This joint must then be thermally insulated. Both the heated probe and the heated line must be connected to a mains power source via a suitable Residual Current Device (RCD) and be left powered up for 20 minutes to achieve their operating temperature before attempting to extract sample gas.

When the probe is inserted into the sampling point it must be suitably supported to prevent bending and unnecessary strain. Likewise the heated line should be carefully supported and never be twisted or kinked as this may damage the internal heating elements.

The heated line is connected to the chiller by attaching the end of the line to the through bulkhead connection in the KANE9206 carry case. A short flexible connection then links the hose to the chiller. The chiller needs to be powered up for at least 10 minutes before it is used.

The peristaltic pump operates automatically. Always check that the drain of the peristaltic pump is clear and that there are no blockages. The peristaltic pump needs to have its flexible rotor replaced after every 1000 hours of operation.


To operate efficiently the chiller needs to be well ventilated so the case lid must be removed, however the unit must be protected externally to prevent ingress of water from either the plant being tested or from rainfall.

MAINTENANCE

EMPTYING AND CLEANING THE IN-LINE WATER TRAP

The water trap should be checked and emptied on a regular basis. Water vapour will condense and gather in the probe line this may move suddenly to the trap when the probe is moved. Care should be taken at all time.


Emptying of the water trap is detailed below :-

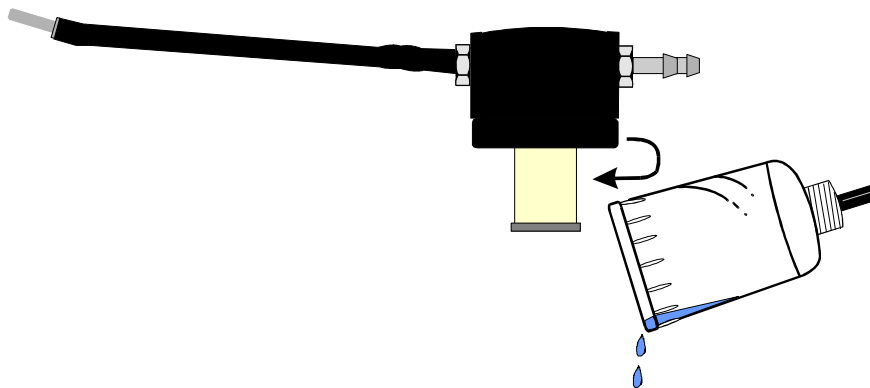

Carefully remove the end cap from the in-line housing. Dispose of the condensate in a suitable drain, care must be taken as it could be acidic. If condensate spills onto the skin or clothing, clean off immediately using fresh water, seek medical advice if problems occur.

CHANGING THE PARTICLE FILTER

This is a very important part of the analyser and should be changed regularly. It prevents dust and dirty particles entering the pump and sensors and hence causing damage. The filter **MUST** be changed when it appears discoloured.

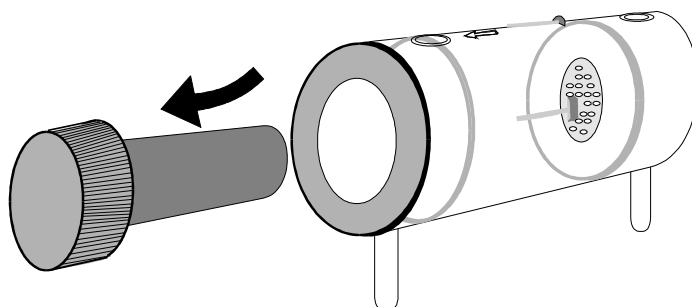

Remove the end cap from the filter housing. Carefully remove the paper filter element and dispose of it. Clean the inside of the filter housing with a suitable soft cloth. Insert a new filter element onto the spigot on the filter end cap and carefully insert it into the filter body.

CHARGING THE BATTERY


It is important that the battery is charged on a regular basis. The instrument constantly powers the internal sensors and may flatten the battery if left unattended for some months. Connect the charger supplied with the instrument to the correct mains supply.

Note: The correct charger type may be required for your local voltage i.e. 110 or 220 volts AC

Insert the plug in the socket marked CHARGER INPUT SOCKET
The CHARGER ON RED LED will flash showing the instrument is charging.

CHANGING THE PAPER ROLL

To change the paper roll remove the printer cover by loosening the two screws holding it down. Remove the old paper roll core and insert the new roll so that it sits as follows :-

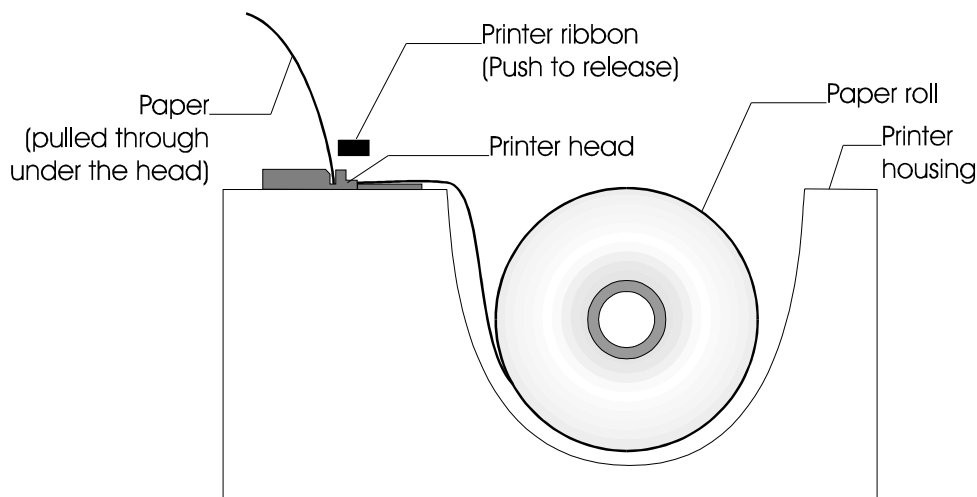

Feed the free end of paper into the printer through the metal slot beneath the printer ribbon. Start the paper feed sequence until the paper has emerged from the top of the printer, feed the loose end through the cover and refit.

TO START PAPER FEED


Go to MENU, REPORTS, FORM FEED

CHANGING THE PRINTER RIBBON

The printer ribbon cartridge will last for approximately two rolls of paper. Remove the printer cover as detailed above.

Marked on one end of the cartridge is PUSH. Gently press down on this end and the ribbon cartridge will pop up at the other end. Remove the cartridge and dispose of.

Fit a new ribbon guiding the paper roll between the exposed ribbon and cartridge body.

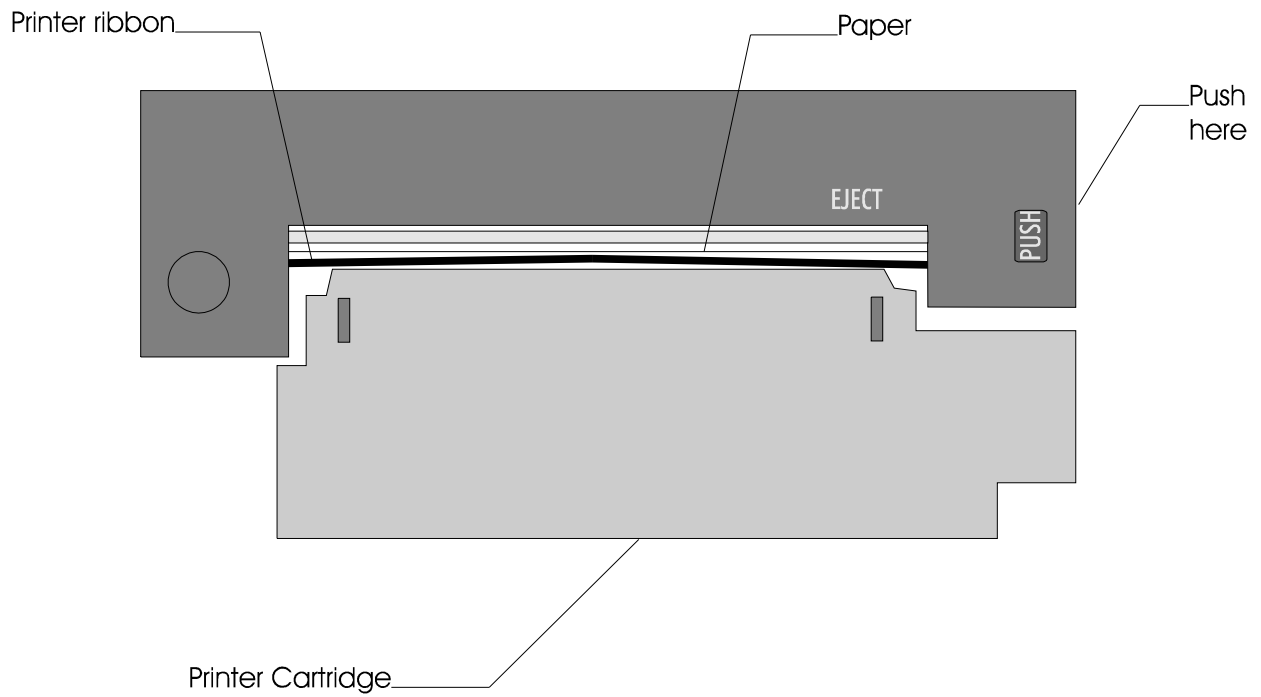

Refit printer cover.

PROBLEM SOLVING

The following is a list of problems that may occur on the instrument through its operating life. If the cause of the fault is not easy to identify then we advise you to contact the Kane International Service Department or an International Distributor for expert advice.

Fault symptom	Causes
Oxygen too high CO ₂ too low	Air leaking into probe, tubing, water trap, connectors or internal to instrument. Oxygen cell needs replacing.
Analyser not holding charge Analyser not charging	Battery exhausted. AC charger not giving correct output. Fuse blown in charger plug.
Analyser does not respond to flue gas	Particle filter blocked. Probe or tubing blocked. Pump not working or damaged with contaminants.
Flue temperature readings erratic	Temperature plug reversed in socket. Faulty connection or break in cable or plug.
Analyser automatically switches off in operation.	Battery below alarm level. Battery quickly discharging and is faulty.
Display is blank.	The contrast setting has been lost and requires resetting. Disconnect handset lead and reconnect. Set contrast as in MENU : SCREEN : CONTRAST

HOW TO GET EXPERT HELP

There will be occasions when despite having read the manual there will be problems that you cannot resolve and so you need external help.

Before calling Kane International or one of its International Distributors please first check the following:

Find the serial number of the instrument. It is located on the label close to where the charger and handset leads plug into the analyser. Also make a note of which sensor are fitted by observing the tick unites on the same label.

If the handset and analyser are operating you can also determine the issue of software loaded in the analyser and its handset by viewing STATUS. If you can, take a printout of STATUS and a printout of the measurement screen so that they can be faxed or emailed to your technical support advisor.

END OF LIFE DISPOSAL

The Waste Electrical or Electronic Equipment (WEEE) Directive requires countries in the EU to maximise collection and environmentally responsible processing of these items.

Products are now labelled with a crossed out wheeled bin symbol to remind you that they can be recycled.

BATTERY DISPOSAL

All the user replaceable batteries used in this product are NiMh and are suitable for recycling through any local waste portable battery recycling scheme.

ANNUAL RECALIBRATION AND SERVICE

Although sensor life is typically more than five years, the monitor should be re-calibrated and serviced annually to stop any long-term sensor or electronics drift or accidental damage.

Local regulations may require more frequent re-calibration.

In the UK Kane International has service facilities at Atherton near Manchester (Tel: 01942-873434), the primary service centre for UK customers and at Welwyn Garden City in Hertfordshire (Tel: 01707-384834), the primary service centre for non-UK customers.

By sending your analyser back to Kane for an annual service (check www.kane.co.uk for details) you have the opportunity to extend the warranty on your analyser to 5 years.

RETURNING YOUR ANALYSER TO KANE

When returning your KANE9206, please always ensure that you enclose:

- ✓ Your full contact details
- ✓ A daytime telephone number
- ✓ Details of faults you might have experienced
- ✓ Any relevant accessories (eg. Probe, printer, adaptor and leak detectors). Any accessories that are returned will be checked. If an accessory has failed then we will quote you for a repair or a replacement.

PACKING YOUR ANALYSER

When returning your analyser, please pack it appropriately to prevent any damage during transit.

Before sealing your package, please ensure that you have enclosed the items listed above and that it is clearly marked for the attention of:

For UK customers:

Northern Service Centre
Kane International Ltd
Gibfield Park Avenue
Atherton
Manchester
M46 0SY

For non-UK customers:

Southern Service Centre
Kane International Ltd
Kane House, Swallowfield
Welwyn Garden City
Hertfordshire
AL7 1JG

SENDING YOUR ANALYSER

Once the analyser has been securely packed then your package is ready for shipment back to Kane. If you do not have an account with a courier company you can take your package to your local Post Office. It is advisable to send the package by Special Delivery so that it is insured and traceable while in transit.

WHEN WE RECEIVE YOUR ANALYSER

On receipt of your package, our Service Engineers will inspect the analyser and any accessories and confirm to you the total service cost. Once you have accepted this the work will be carried out, and upon completion the analyser returned to you.

If you have any questions that we haven't answered, please feel free to contact our Southern Service Centre:

For UK customers:

Tel: 01942 873434
Fax: 01942 873558
Email: nservice@kane.co.uk

For non-UK customers:

Tel: 01707 384834
Fax: 01707 384833
Email: sservice@kane.co.uk

Service Returns (Simply cut out and attach to your package)

Southern Service Centre
Kane International Ltd
Kane House, Swallowfield
Welwyn Garden City
Hertfordshire
AL7 1JG



Northern Service Centre
Kane International Ltd
Gibfield Park Avenue
Atherton
Manchester
M46 0SY



Southern Service Centre
Kane International Ltd
Kane House, Swallowfield
Welwyn Garden City
Hertfordshire
AL7 1JG



PRODUCT SPECIFICATION

UNIT

Temp Measurement	Resolution	Accuracy	Range
Flue Temperature	0.1° (C/F)	1.0 ° C \pm 0.3% of reading	0-1100°C 32-2140°F * Use high temperature probe for gases >600°C/1112°F
Inlet Temperature	0.1° (C/F)	1.0 ° C \pm 0.3% of reading	0-600°C 0-999°F

Gas Measurement ^{*1}	Resolution	Accuracy	Range
Oxygen (O ₂):	0.1%	-0.1% +0.2%	0-25%
Carbon monoxide (CO): (standard: H compensated)	1ppm	\pm 5ppm < 100ppm 5% of reading < 2000ppm \pm 10% of reading >2000ppm	0-10,000ppm
Nitric oxide (NO): (high range0)	1ppm	\pm 5ppm < 100ppm \pm 5% of reading >100ppm	0-5,000ppm
Nitric oxide (NO) (low range)	1ppm	\pm 2ppm < 30ppm \pm 5ppm >30ppm	0-100ppm
Nitrogen dioxide (NO ₂):	1ppm	\pm 5ppm <100ppm \pm 10ppm < 500ppm \pm 5% of reading > 500ppm	0-1,000ppm
Sulphur dioxide (SO ₂) (low range):	1 ppm	\pm 2ppm <30ppm \pm 5ppm >30ppm	0-100ppm
Sulphur dioxide (SO ₂) (high range):	1ppm	\pm 5ppm <100ppm \pm 5% of reading >100ppm	0-5,000ppm
Hydrogen sulphide:	1 ppm	\pm 5ppm <100ppm \pm 5% of reading >100ppm	0-1,000ppm
Pressure:	0.01mbar	\pm 0.5% Full scale	0 - 150mbar
Carbon dioxide (CO ₂) ^{*2} :	0.1%	\pm 0.3%	0 - Fuel Value
Efficiency ^{*2} :	0.1%	\pm 1%	0-100%

*1 using dry test gases at STP

*2 calculated

NB: all ppm reading can be displayed in mg/m³ and can be normalised

OPTIONAL IR MODULE

Hydrocarbons:			
Range:	Overrange	Accuracy	Resolution
0-5,000ppm	10,000ppm	$\pm 5\%$ of reading and ± 12 ppm vol.	1ppm
CO₂:			
Range:	Overrange	Accuracy	Resolution
0-20%	40%	$\pm 5\%$ of reading and $\pm 0.5\%$ vol.	0.1%
CO:			
Range:	Overrange	Accuracy	Resolution
0-10%	20%	$\pm 5\%$ of reading and $\pm 0.2\%$ vol. <30%	0.1%

Response time T90:	30 seconds
Warm up time:	3 minutes
Operating temperature range:	5 to 50 deg C.
Operating humidity:	10-80% non condensing
Power:	Supplied by KANE9206

Conversion Factors from a Hexane Calibration	
Hexane	multiply by 1
Propane	multiply by 0.5
Methane	multiply by 0.05

HANDSET

Dimensions	220 mm long 120 mm high 50 mm wide
Keypad	tactile keys
Display	graphical with backlight and contrast control

EXTENSION CABLE

Specification:	8 pin DIN cable
Cable lengths:	5m Standard 10-20m-Optional

MAIN BATTERY AND OPTIONAL HEATER BATTERY

Type:	NiMH Rechargeable (12V, 2AH)
Life:	8 hours from full charge
Charge time:	12 hours trickle 4 hours fast charge

BATTERY CHARGER

Input:	100V-240V AC 60 watts
Output:	15V DC @ 4 amps

PUMP

Flow rate:	2 Litres/Minute nominal 500 mbar static suction
------------	--

INTEGRAL PRINTER

16 character dot matrix.
Plain paper

AMBIENT OPERATING RANGE

-10°C to + 55°C

< 85% RH non condensing

Storage: -10°C to 55°C

HEATED LINE: KMHL3000

Power supply: 220V ac @ maximum 300 watts

HEATED PROBE: KMHP1200

Power supply: 220V ac @ maximum 100 watts
1200mm insertion length, 8 mm diameter rated to 1000 ° C

GAS CONDITIONING MODULE: KMDM220

Power supply: 220 Vac @ 5 amps peak.

PROBE

Choose from a range of probe options. **See probe leaflet.**

OPTIONAL PORTABLE PRINTERS

Compatible with KMIRP ... now obsolete

Compatible with KMIRP-2

APPENDICES

A – PARAMETER MEANINGS

The parameters and their meanings are detailed as follows : -

DATE :	Analyser date.
TIME :	Analyser time.
MAIN BATTERY/ HEATER BATTERY:	Displays the battery level from 0-100%. The analyser will flash RECHARGE BATTERY at less than 10 % of charge. The analyser may show levels greater than 100% when the charger is connected.
----- :	Displayed when a calculation cannot be performed because a probe is not fitted or a parameter is out of range.
FUEL :	The fuel used in calculation of efficiency and carbon dioxide.
K1g:	Gross calorific fuel constant. See Appendix for calculation.
K1n :	Gross calorific fuel constant. See Appendix for calculation.
K2 :	Percentage Maximum theoretical CO ₂ (dry basis).
K3:	Percentage wet loss.
K4 :	Percentage unburnt carbon loss.
O2r :	Toxic gas measurements can be referenced to defined oxygen levels. Oxygen referencing is required by some regulations such as TA-LUFT. If a reference value is selected the toxic gas measurements will be displayed with the symbol n attached to the units. i.e.ppmn What does oxygen reference mean ? If 3 % O ₂ reference is selected and 5 % O ₂ is measured in the flue then toxic gas values will be recalculated as if 3 % were measured. The equation for referencing is detailed in the Appendix. oxygen referencing prevents false readings being submitted, e.g. allowing more air into the boiler will increase the oxygen level in the flue and hence dilute any toxic gas reading. Oxygen referencing gives readings as if they were undiluted.
NETT :	Nett temperature calculated by deducting the internal AMBIENT temperature from the measured FLUE temperature. Displays in either Centigrade C or Fahrenheit F and will display NOT FITTED if flue probe not connected. If an external INLET probe is used then INLET is deducted from FLUE.

O ₂ :	Oxygen reading in percentage %.
CO :	Carbon monoxide reading indicated in ppm or mg/m ³ . If the figures are referenced to oxygen then the display will show ppmn or mg/m ³ n. Note with a high CO sensor fitted the reading will be displayed in percentage %.
EFF (G) :	Combustion Efficiency calculation displayed in percentage. Gross (G) or Net (N) can be set. The calculation is determined by fuel type see Appendix for calculation. The efficiency is displayed during a combustion test, 00.0 is displayed while in fresh air.
CO ₂ :	Carbon dioxide reading in percentage % when measured , not calculated
CO ₂ c:	Carbon dioxide calculation determined by the type of fuel. This only shows a reading when a combustion test is being carried out. Zero (0.0) is displayed while in fresh air.
FLUE :	Temperature measured by flue gas probe in Centigrade or Fahrenheit. Will show ambient temperature after fresh air calibration and N\F if probe disconnected.
INLET :	Temperature measured by the optional inlet air probe or stored using the Flue probe. The air probe is plugged into the instrument through the INLET socket. This figure is used to calculate the NET temperature instead of AMBIENT when fitted. Will show N\F if not fitted.
AMBIENT :	Temperature measured by the internal sensor, used in the NET temperature
CO/CO ₂ R :	The CO/CO ₂ ratio, is the ratio of measured CO divided by CO ₂ . It gives an indication of the following :- How good a gas sample the instrument is reading. How clean the boiler is running. For example : A new or clean domestic boiler will display a ratio of less than 0.004, a unit in need of cleaning 0.0040-0.0080 and a unit in need of major overhaul will show greater than 0.008. This only shows a reading when a combustion test is being carried out. 0.0000 is displayed while in fresh air.
P INDEX :	The CO/CO ₂ ratio expressed as a percentage %, called the 'Poison Index" i.e. P INDEX % = 100 x CO/CO ₂ . 0.00 is displayed while in fresh air.
XAIR % :	Excess air calculated from the measured oxygen and type of fuel used. Displays reading during a combustion test +++ is displayed while in fresh air.

PRESSURE:	Pressure reading. Units can be changed to different scales.		
NO:	Nitric oxide reading in ppm or mg/m ³ . Displayed when nitric oxide sensor fitted. Reading can also be referenced to oxygen ppmn or mg/m ³ n.		
NO ₂ :	Nitrogen dioxide reading in ppm or mg/m ³ . Displayed when nitrogen dioxide sensor fitted. Reading can also be referenced to oxygen ppmn or mg/m ³ n.		
NO _x :	Calculated total nitric oxides displayed in ppm or mg/m ³ . Reading can also be referenced to oxygen ppmn or mg/m ³ n.		
SO ₂ :	Sulphur dioxide reading in ppm or mg/m ³ . Displayed when sulphur dioxide sensor fitted. Reading can also be referenced to oxygen ppmn or mg/m ³ n.		
H ₂ S:	Hydrogen sulphide reading in ppm or mg/m ³ . Displayed when Hydrogen sulphide fitted. Reading can also be referenced to oxygen ppmn or mg/m ³ n.		
HC :	Unburnt Hydrocarbon reading ppm of hexane, the sensor is calibrated with hexane. Displayed when an infra red module is fitted. Use equivalent factors for propane and methane.		
LOSS :	Total losses calculated from Combustion Theory. This is the summation of the next three parameters.		
DRY :	Calculated heat lost in turning the carbon in the fuel to carbon ioxide (CO ₂).		
WET :	Calculated heat lost in turning the hydrogen in the fuel into water (H ₂ O).		
CO LOSS % :	Calculated loss due to partially burnt carbon. Any carbon monoxide (CO) in the flue has the potential to be turned into carbon dioxide and release more heat, hence this heat is lost up the flue.		
GPS (Y):	Latitude	DDMM.MMM	5148.1060
GPS (X):	Longitude	DDDMM.MMM	-00011.450
ATM:	Atmospheric pressure in mbar		

B. NO_x CALCULATIONS

ONLY AN NO SENSOR FITTED

WORKING IN PPM: NO_x REFERENCED TO NO

The user can select the assumed NO₂ percentage and the O₂ normalised level

then: $NO_x \text{ in ppm} = NO \text{ in ppm multiplied by } (1 + \text{assumed } NO_2 \text{ percentage})$

in this setup NO_x can only be displayed as NO_x = NO

then normalising:

$NO \text{ in ppmn} = NO \text{ in ppm multiplied by } (21 \text{ minus the } O_2\text{norm setting}) \text{ and then divided by } (21 \text{ minus the actual } O_2 \text{ reading})$

For a worked example assume:

NO is 1000ppm
NO₂ is 5% of NO
O₂norm is set to 3%
actual O₂ is zero

$NO_x \text{ in ppm} = 1000 \times (1 + 5/100) = 1000 \times 1.05 = 1050 \text{ ppm}$

$NO \text{ ppmn} = 1000 \times (21 - 3)/(21-0) = 1000 \times 18 / 21 = 857 \text{ ppmn}$

$NO_x \text{ ppmn} = 1050 \times 18 / 21 = 900 \text{ ppmn}$

or

$NO_x \text{ ppmn} = 857 \times 1.05 = 900 \text{ ppmn}$

WORKING IN mg/m³: NO_x REFERENCED TO NO OR NO₂

The user can select the assumed NO₂ percentage, the O₂ reference level and whether the NO_x reading is referenced to NO or NO₂

WORKING IN mg/m³: REFERENCED TO NO

$NO \text{ in mg/m}^3 = NO \text{ in ppm multiplied by } 1.34$

$NO_x \text{ in mg/m}^3 = NO \text{ in mg/m}^3 \text{ multiplied by } (1 + \text{assumed } NO_2 \text{ percentage})$

WORKING IN mg/m³: NOX REFERENCED TO NO₂

NO_x in mg/m³ = NO in ppm multiplied by 2.05 multiplied by (1 + assumed NO₂ percentage)

or

NO_x in mg/m³ = NO in mg/m³ divided by 1.34, multiplied by 2.05 and multiplied by (1 + assumed NO₂ percentage)

NORMALISING READINGS

normalised reading = initial reading multiplied by (21 minus the O_{2norm} setting) and then divided by (21 minus the actual O₂ reading)

BOTH NO AND NO₂ SENSORS FITTED

WORKING IN PPM: NOX = NO + NO₂

normalising readings

ppm_n = initial reading in ppm multiplied by (21 minus the O_{2norm} setting) and then divided by (21 minus the actual O₂ reading)

WORKING IN MG/M³

The user can select how the readings are referenced.

NO_x = SUM

NO_x = NO

NO_x = NO₂

NOX = SUM

NO_x in mg/m³ = NO in ppm multiplied by 1.34 plus NO₂ in ppm multiplied by 2.05

NOX = NO

NO_x in mg/m³ = (NO in ppm plus NO₂ in ppm) multiplied by 1.34

NOX = NO₂

NO_x in mg/m³ = (NO in ppm plus NO₂ in ppm) multiplied by 2.05

NORMALISING READINGS

ppmn = initial reading in ppm multiplied by (21 minus the O_{2norm} setting) and then divided by (21 minus the actual O_2 reading)

mg/m³n = initial reading in mg/m³ multiplied by (21 minus the O_{2norm} setting) and then divided by (21 minus the actual O_2 reading)

ONLY AN NO₂ SENSOR FITTED

When there is only an NO₂ sensor fitted the NO_x function is disabled

NO₂ in mg/m³ = NO₂ in ppm multiplied by 2.05

NORMALISING READINGS

ppmn = initial reading in ppm multiplied by (21 minus the O_{2norm} setting) and then divided by (21 minus the actual O_2 reading)

mg/m³n = initial reading in mg/m³ multiplied by (21 minus the O_{2norm} setting) and then divided by (21 minus the actual O_2 reading)

HIGH CO PURGE OPERATION

If there is a requirement to measure CO to concentrations above 10,000ppm then a High Purge module should be fitted (this comprises both a purge pump and a solenoid) in addition to the IR triple gas bench.

When the electrochemical sensor's reading passes 9800ppm the solenoid operates and the high purge pump switches on and pumps fresh air across the electrochemical CO sensor. The displayed reading changes at this point from ppm to % as measured by the IR module.

When the reading from the IR module falls below 0.95% the solenoid is deactivated and the high purge pump stopped. After a short time the displayed reading will revert to ppm. There may be a small perturbation in readings at the point of changeover.

C. COMBUSTION EFFICIENCY CALCULATION

The efficiency calculation is based upon British Standard BS845.

This identifies three sources of loss associated with fuel burning:

LOSSES DUE TO FLUE GASSES: Dry Flue gas loss,
Moisture and hydrogen
Sensible heat of water vapour
Unburned gas

LOSSES DUE TO REFUSE: Combustible in ash
Combustible in riddlings
Combustible in dust

OTHER LOSSES: Radiation
Convection
Conduction
Other unmeasured losses

Net efficiency calculations assume that the energy contained in the water vapour (formed as a product of combustion and from wet fuel) is recovered and the wet loss term is zero. Gross efficiency calculations assume that the energy contained in the water vapour is not recovered.

Since the fuel air mixture is never consistent there is the possibility of unburned/partially unburned fuel passing through the flue. This is represented by the unburned carbon loss.

Losses due to combustible matter in ashes, riddlings, dust and grit, radiation, convection and conduction are not included.

EFFICIENCY CALCULATION:

Known Data - Fuel: Q_{gr} = Gross Calorific Value (kJ/kg)
 Q_{net} = Net Calorific Value (kJ/kg)
 K_1 = Constant based on Gross or Net Calorific Value:
 $K_{1g} = (255 \times \% \text{carbon in fuel}) / Q_{gr}$
 $K_{1n} = (255 \times \% \text{carbon in fuel}) / Q_{net}$
 K_2 = % max theoretical CO_2 (dry basis)
 K_3 = % Wet Loss

Measured Data: T_f = Flue Temperature
 T_i = Inlet Temperature
 O_{2m} = % Oxygen in flue gas

Calculated data: T_{net} = Net Temperature
% CO_2 content in flue gas
% Dry Flue Gas losses
% Wet losses
% Unburned carbon loss
% Efficiency

$$\begin{aligned}
\%CO_2 &= (20.9 - \%O_2m) \times K_2 / 20.9 \\
T_{net} &= \text{Flue Temperature} - \text{Inlet Temperature} \\
\text{Dry flue gas loss} &= 20.9 \times K_{1n} \times (T_{net}) / K_2 \times (20.9 - \%O_2m) \\
\text{Wet loss} &= 9 \times \%H_2 + \%H_2O / Q_{gr} \times [2488 + 2.1T_f - 4.2T_i] \\
\text{simplified} &= [(9 \times \%H_2 + \%H_2O) / Q_{gr}] \times 2425 \times [1 + 0.001 T_{net}] \\
\text{Wet loss} &= K_3(1+0.001 \times T_{net}) \\
\text{Where } K_3 &= [(9 \times \%H_2 + \%H_2O) / Q_{gr}] \times 2425 \\
\text{Net Efficiency} &= 100\% - \text{dry flue gas losses} \\
&= 100\% - 20.9 \times K_{1n} \times (T_{net}) / K_2 \times (20.9 - \%O_2m) \\
\text{Gross Efficiency} &= 100\% - \{\text{dry flue gas losses} + \text{wet losses}\} \\
&= 100\% - [20.9 \times K_{1g} \times (T_{net}) / K_2 \times (20.9 - \%O_2m)] + \\
&\quad [K_3 \times (1 + 0.001 \times T_{net})] \\
\text{Excess Air} &= [(20.9\% / (20.9\% - O_2m\%)) - 1] \times 100\% \\
CO_2\% &= [(20.9\% - O_2m\%) \times K_2\% / 20.9\%] \\
\text{Unburned fuel Loss} &= K_4 \times CO\% / (CO\% + CO_2\%) \\
\text{Where } K_4 &= 70 \text{ for coke} \\
&= 65 \text{ for anthracite} \\
&= 63 \text{ for Bituminous coal} \\
&= 62 \text{ for coal tar fuel} \\
&= 48 \text{ for liquid petroleum fuel} \\
&= 32 \text{ for natural gas}
\end{aligned}$$

The formula for K4 is based on the gross calorific value Qgr. To obtain the loss based on net calorific value multiply by Qgr/Qnet. Since this loss is usually small this conversion has been ignored.

OXYGEN REFERENCE

$$CO(n) = CO \times \frac{(20.9 - O_{2r})}{(20.9 - O_2m)}$$

D. CALCULATION OF FUEL DATA

For any fuel not specified by Kane International the net calorific value, gross calorific value and composition should be obtained from the fuel supplier.

The following fuel data has been calculated with reference to the efficiency calculation.

Example 1:

Chemical composition:	C	25%
	H ₂	3%
	H ₂ O	50%
	Q _{net}	8.35 MJ/kg
	Q _g	9.3 MJ/kg *
	Max CO ₂	20.4%

$$\begin{aligned} \mathbf{K1n} &= (255 \times \% \text{ carbon in fuel}) / Q_{\text{net}} \text{ (kJ/Kg)} \\ &= (255 \times 25) / 8350 = \mathbf{0.763} \end{aligned}$$

$$\begin{aligned} \mathbf{K1g} &= (255 \times \% \text{ carbon in fuel}) / Q_{\text{g}} \text{ (kJ/Kg)} \\ &= (255 \times 25) / 9300 = \mathbf{0.685} \end{aligned}$$

$$\mathbf{K2} = \text{Max \% CO}_2 = \mathbf{20.40}$$

$$\begin{aligned} \mathbf{K3} = \text{Wet Loss} &= [(9 \times \% \text{H}_2 + \% \text{H}_2\text{O}) / 9300] \times 2425 \\ &= [(9 \times 3 + 50) / 9300] \times 2425 \\ &= (77 / 9300) \times 2425 = \mathbf{20.08} \end{aligned}$$


$$\mathbf{K4} = \mathbf{65} \text{ (an approximation for wood) } *$$

The fuel values to program into the Analyser are as follows:

NATURAL GAS			
K1g	: 0.763	K1n	: 0.685
K_2	: 20.4	K_3	: 20.08
K_4	: 65	O2r	: 8.0

* Assumed values in the absence of supplied data. See previous appendix for other fuels.

E. ELECTROMAGNETIC COMPATIBILITY (CE) STATEMENT

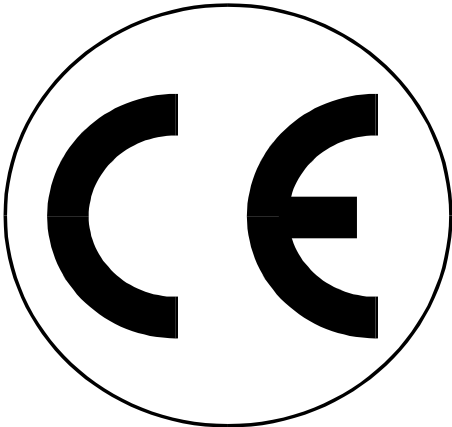

This product has been tested
for compliance with the
following generic standards:

EN 61000-6-3 : 2011

EN 61000-6-1 : 2007

and is certified to be compliant

Specification
EC/EMC/KI/KANE9206 details
the specific test configuration,
performance and conditions of
use.

SAFETY STANDARD

This product complies with the
EN61010 Safety Standard
(Safety requirements for
electrical equipment for
measurement, control and
laboratory use):

EN61010-1 : 2010

Protection Class 3 (SELV)

Product Registration

*Please complete, detach and return to: Kane International Ltd,
Kane House, Swallowfield, Welwyn Garden City, Hertfordshire, AL7 1JG*

Your Details	
Name:	
Job Title:	
Company Name:	
Company Address 1:	
Address 2:	
Town/City:	
County:	
Postcode:	
Country:	
Phone Number:	
Fax Number:	
Mobile Number:	
Email Address:	

Product Details	
<i>Note: Proof of Purchase may be required for warranty claims.</i>	
Date Purchased as numbers (05.01.10):	
Purchased From:	
Model Number:	KANE9206
Product Serial Number:	



Why did you buy a Kane Product?

- | | |
|--|--|
| <input type="checkbox"/> Dealer Recommendation | <input type="checkbox"/> Other Recommendation |
| <input type="checkbox"/> Value for Money | <input type="checkbox"/> Our Fixed Price Servicing Programme |
| <input type="checkbox"/> Kane | <input type="checkbox"/> Previous Owner |
| <input type="checkbox"/> Not your Decision | <input type="checkbox"/> Other: |

What brand was your previous analyser?

How did you hear about Kane?

- | | |
|--|---|
| <input type="checkbox"/> Magazine Advert | <input type="checkbox"/> Trade Counter Literature |
| <input type="checkbox"/> Personal Recommendation | <input type="checkbox"/> Internet |
| <input type="checkbox"/> Exhibition | <input type="checkbox"/> Other: |

Thank you for completing this survey.
All the information we have collected is confidential.
We do not sell or share data with any other company or organisation.



Thank you for buying this
instrument.

Before use,
please register on our website

www.kane.co.uk

or complete, detach and
return the Product
Registration Page.